

ISO/IEC 29341-8-14:2008-11 (E)

Information technology_ - UPnP Device Architecture_ - Part_ 8-14: Internet Gateway Device Control Protocol_ - Wide Area Network Cable Link Configuration Service

CONTENTS

- FOREWORD 4
- ORIGINAL UPNP DOCUMENTS (informative) 6
- 1. Overview and Scope 8**
- 2. Service Modeling Definitions 9**
 - 2.1. ServiceType 9
 - 2.2. State Variables 9
 - 2.2.1. CableLinkConfigState 10
 - 2.2.2. LinkType 11
 - 2.2.3. DownstreamFrequency 11
 - 2.2.4. DownstreamModulation 11
 - 2.2.5. UpstreamFrequency 11
 - 2.2.6. UpstreamModulation 11
 - 2.2.7. UpstreamChannelID 11
 - 2.2.8. UpstreamPowerLevel 11
 - 2.2.9. BPIEncryptionEnabled 11
 - 2.2.10. ConfigFile 11
 - 2.2.11. TFTPServer 11
 - 2.2.12. Relationships Between State Variables 11
 - 2.3. Eventing and Moderation 12
 - 2.3.1. Event Model 12
 - 2.4. Actions 13
 - 2.4.1. GetCableLinkConfigInfo 13
 - 2.4.2. GetDownstreamFrequency 14
 - 2.4.3. GetDownstreamModulation 14
 - 2.4.4. GetUpstreamFrequency 15
 - 2.4.5. GetUpstreamModulation 15
 - 2.4.6. GetUpstreamChannelID 16
 - 2.4.7. GetUpstreamPowerLevel 16
 - 2.4.8. GetBPIEncryptionEnabled 17
 - 2.4.9. GetConfigFile 17
 - 2.4.10. GetTFTPServer 18
 - 2.4.11. Non-Standard Actions Implemented by a UPnP Vendor 18
 - 2.4.12. Relationships Between Actions 18
 - 2.4.13. Common Error Codes 18
 - 2.5. Theory of Operation 19
 - 2.5.1. Connection Initiation 19
 - 2.5.2. Deployment Scenarios 22
- 3. XML Service Description 23**
- 4. Test 26**

LIST OF TABLES

| | |
|--|----|
| Table 1: State Variables | 9 |
| Table 1.1: AllowedValueList for CableLinkConfigState | 10 |
| Table 1.2: AllowedValueList for LinkType | 10 |
| Table 1.3: AllowedValueList for DownstreamModulation | 10 |
| Table 1.4: AllowedValueList for UpstreamModulation | 10 |
| Table 2: Event Moderation | 12 |
| Table 3: Actions | 13 |
| Table 4: Arguments for GetCableLinkConfigInfo | 13 |
| Table 5: Arguments for Get GetDownstreamFrequency | 14 |
| Table 6: Arguments for GetDownstreamModulation | 14 |
| Table 7: Arguments for GetUpstreamFrequency | 15 |
| Table 8: Arguments for GetUpstreamModulation | 15 |
| Table 9: Arguments for GetUpstreamChannelID | 16 |
| Table 10: Arguments for GetUpstreamPowerLevel | 16 |
| Table 11: Arguments for GetBPIEncryptionEnabled | 17 |
| Table 12: Arguments for GetConfigFile | 17 |
| Table 13: Arguments for GetTFTPServer | 18 |
| Table 14: Common Error Codes | 18 |