

# ISO/IEC 29341-8-14:2008-11 (E)

## Information technology\_ - UPnP Device Architecture\_ - Part\_ 8-14: Internet Gateway Device Control Protocol\_ - Wide Area Network Cable Link Configuration Service

---

### CONTENTS

FOREWORD .....	4
ORIGINAL UPNP DOCUMENTS (informative) .....	6
<b>1. Overview and Scope .....</b>	<b>8</b>
<b>2. Service Modeling Definitions .....</b>	<b>9</b>
2.1. ServiceType .....	9
2.2. State Variables .....	9
2.2.1. CableLinkConfigState .....	10
2.2.2. LinkType .....	11
2.2.3. DownstreamFrequency .....	11
2.2.4. DownstreamModulation .....	11
2.2.5. UpstreamFrequency .....	11
2.2.6. UpstreamModulation .....	11
2.2.7. UpstreamChannelID .....	11
2.2.8. UpstreamPowerLevel .....	11
2.2.9. BPIEncryptionEnabled .....	11
2.2.10. ConfigFile .....	11
2.2.11. TFTPServer .....	11
2.2.12. Relationships Between State Variables .....	11
2.3. Eventing and Moderation .....	12
2.3.1. Event Model .....	12
2.4. Actions .....	13
2.4.1. GetCableLinkConfigInfo .....	13
2.4.2. GetDownstreamFrequency .....	14
2.4.3. GetDownstreamModulation .....	14
2.4.4. GetUpstreamFrequency .....	15
2.4.5. GetUpstreamModulation .....	15
2.4.6. GetUpstreamChannelID .....	16
2.4.7. GetUpstreamPowerLevel .....	16
2.4.8. GetBPIEncryptionEnabled .....	17
2.4.9. GetConfigFile .....	17
2.4.10. GetTFTPServer .....	18
2.4.11. Non-Standard Actions Implemented by a UPnP Vendor .....	18
2.4.12. Relationships Between Actions .....	18
2.4.13. Common Error Codes .....	18
2.5. Theory of Operation .....	19
2.5.1. Connection Initiation .....	19
2.5.2. Deployment Scenarios .....	22
<b>3. XML Service Description .....</b>	<b>23</b>
<b>4. Test .....</b>	<b>26</b>

## LIST OF TABLES

Table 1: State Variables .....	9
Table 1.1: AllowedValueList for CableLinkConfigState.....	10
Table 1.2: AllowedValueList for LinkType.....	10
Table 1.3: AllowedValueList for DownstreamModulation.....	10
Table 1.4: AllowedValueList for UpstreamModulation.....	10
Table 2: Event Moderation.....	12
Table 3: Actions.....	13
Table 4: Arguments for GetCableLinkConfigInfo .....	13
Table 5: Arguments for Get GetDownstreamFrequency .....	14
Table 6: Arguments for GetDownstreamModulation.....	14
Table 7: Arguments for GetUpstreamFrequency.....	15
Table 8: Arguments for GetUpstreamModulation .....	15
Table 9: Arguments for GetUpstreamChannelID.....	16
Table 10: Arguments for GetUpstreamPowerLevel .....	16
Table 11: Arguments for GetBPIEncryptionEnabled.....	17
Table 12: Arguments for GetConfigFile.....	17
Table 13: Arguments for GetTFTPServer.....	18
Table 14: Common Error Codes.....	18