

# ISO/IEC 14543-5-101:2019-06 (E)

## Information technology - Home electronic systems (HES) architecture - Part 5-101: Intelligent grouping and resource sharing remote AV access profile

---

<b>Contents</b>	<b>Page</b>
FOREWORD.....	4
INTRODUCTION.....	5
1 Scope.....	7
2 Normative references .....	7
3 Terms, definitions and abbreviated terms .....	8
3.1 Terms and definitions.....	8
3.2 Abbreviated terms.....	8
4 Conformance .....	9
5 Overview of IGRS remote media access profile .....	9
6 Application scenarios of remote media access.....	9
7 Remote media access application system.....	10
7.1 Overview.....	10
7.2 IGRS RAMS.....	10
7.3 IGRS RAMC.....	12
7.4 Extension of RAMS and RAMC modules .....	13
8 Message data format of remote media access application .....	13
8.1 Classification of message and data format.....	13
Annex A (normative) Specification of MTS .....	15
A.1 Overview.....	15
A.2 MTS service type .....	15
A.3 MTS interface invocation reference flow.....	15
A.4 MTS service attributes .....	16
A.5 MTS data types.....	16
A.6 MTS invocation interfaces.....	16
A.6.1 PrepareForTranscoding .....	16
A.6.2 StartTranscoding .....	17
A.6.3 StopTranscoding .....	17
A.6.4 GetTranscodingStatus .....	17
A.6.5 MTS error codes.....	18
Annex B (normative) Web Services Description Language (WSDL) description of MTS.....	19
Bibliography.....	22
Figure 1 – Interaction model of IGRS RA media access application .....	10
Figure 2 – Components of IGRS RAMS.....	11
Figure 3 – Components of IGRS RAMC .....	12
Figure 4 – Extension of RAMS and RAMC modules .....	13
Message 1 – Format of request message.....	14
Message 2 – Format of response message .....	14
Message 3 – Format of push message.....	14
Figure A.1 – Service invocation flow of MTS .....	15

Table A.1 – MTS service attributes .....	16
Table A.2 – MTS data types .....	16
Table A.3 – Input/Output parameters of PrepareForTranscoding .....	17
Table A.4 – Input/Output parameters of StartTranscoding .....	17
Table A.5 – Input/Output parameters of StopTranscoding .....	17
Table A.6 – Input/Output parameters of GetTranscodingStatus .....	18
Table A.7 – MTS error codes .....	18