

# DIN EN 16019:2014-06 (E)

## Railway applications - Automatic coupler - Performance requirements, specific interface geometry and test method

---

<b>Contents</b>	<b>Page</b>
Foreword .....	4
1 Scope .....	5
2 Normative references .....	5
3 Terms and definitions .....	5
4 Product requirements .....	6
4.1 Automatic coupler head characteristics .....	6
4.2 Coupling system positions .....	8
4.2.1 General .....	8
4.2.2 Ready-to-couple position .....	8
4.2.3 Coupled position .....	8
4.2.4 Uncoupled position .....	9
4.3 Coupling requirements .....	9
4.3.1 Mechanical coupling .....	9
4.3.2 Pneumatic coupling .....	10
4.4 Uncoupling .....	11
5 Tests .....	11
5.1 Type tests .....	11
5.1.1 General .....	11
5.1.2 Strength test .....	11
5.1.3 Dimension test .....	14
5.1.4 Gathering range test .....	15
5.2 Routine tests .....	15
5.2.1 General .....	15
5.2.2 Visual checks .....	15
5.2.3 Dimension test .....	15
5.2.4 Function tests .....	15
Annex A (normative) Automatic coupler interface .....	17
Annex B (informative) Gathering range .....	22
Annex C (informative) Example method of coupler lock play measurement .....	23
Annex D (normative) Air pipe connections .....	26
Annex ZA (informative) Relationship between this European Standard and the Essential Requirements of EU Directive 2008/57/EC .....	28
Bibliography .....	30
Figures Page Figure 1 -- Principle arrangement of coupler head .....	7
Figure 2 -- Ready-to-couple position .....	8
Figure 3 -- Coupled position .....	9

<b>Figure 4 -- Uncoupled position .....</b>	<b>9</b>
<b>Figure 5 -- Successful coupling in curves .....</b>	<b>10</b>
<b>Figure 6 -- Unsuccessful coupling in curves .....</b>	<b>10</b>
<b>Figure 7 -- Strain gauges on the coupler head housing for the tensile test (tensile and compressive) .....</b>	<b>12</b>
<b>Figure 8 -- Strain gauge on the hook plate for the tensile test .....</b>	<b>13</b>
<b>Figure 9 -- Strain gauges on the coupling link for the tensile test .....</b>	<b>13</b>
<b>Figure A.1 -- Automatic coupler head (front view) .....</b>	<b>17</b>
<b>Figure A.2 -- Automatic coupler head (top view) .....</b>	<b>18</b>
<b>Figure A.3 -- Automatic coupler head (lateral view) .....</b>	<b>19</b>
<b>Figure A.4 -- Automatic coupler head in the coupled position (cross section) .....</b>	<b>20</b>
<b>Figure A.5 -- Automatic coupler head (isometric view) .....</b>	<b>21</b>
<b>Figure B.1 -- Typical gathering range of the Type 10 coupler .....</b>	<b>22</b>
<b>Figure B.2 -- Typical gathering range of the Type 10 coupler with guide bar .....</b>	<b>22</b>
<b>Figure C.1 -- Coupler lock play gauge Type 10 .....</b>	<b>23</b>
<b>Figure C.2 -- Coupler lock play gauge .....</b>	<b>24</b>
<b>Figure C.3 -- Coupler lock play measurement .....</b>	<b>25</b>
<b>Figure D.1 -- Brake pipe valve .....</b>	<b>26</b>
<b>Figure D.2 -- Main reservoir and uncoupling valve .....</b>	<b>27</b>