

DIN EN 16334:2014-12 (E)

Railway applications - Passenger Alarm System - System requirements

Contents		Page
Foreword		4
1	Scope	5
2	Normative references	5
3	Terms and definitions	6
4	Symbols and abbreviated terms	7
5	System overview, architecture and interfaces	7
6	Functional requirements	7
6.1	General	7
6.2	Advise the driver (and optionally on board staff members or control centre) of a potential danger	7
6.3	Advise the passenger	8
6.4	Manage PAS communication	9
6.5	Determine if the train is stopped at a platform or departing from a platform	10
6.6	Recognize the action of the driver	10
6.7	Request brake action	10
6.8	PAS actions after PAD activation	11
6.9	PAS power up in the active cab or train reconfiguration	11
6.10	Driver acknowledgement	11
6.11	Overriding PAS brake request	12
6.12	Reset the PAS	12
7	Event sequence	12
8	Degraded modes	12
8.1	PAS degraded mode: isolated or not functioning	12
8.2	Advising the driver	12
9	Minimum safety requirements	13
10	Requirements for PAD	13
10.1	Installation requirements	13
10.2	Passenger interface	14
10.2.1	PAD	14
10.2.2	Information labels	15
Annex A (normative) PAS information management		17
Annex B (normative) PAS brake request management		19
Annex C (normative) Sign indicating the reset equipment for the local PAD		20
Annex D (informative) Square key to restore the passenger emergency brake PAD in the initial position (mandatory for international service trains)		22
Annex E (informative) System overview		23

Annex F (normative) Overall dimension of the PAD handle interface	25
Annex G (informative) Inscription indicating the PAD	26
Annex H (informative) Label for PAD	27
Annex I (informative) Degraded mode	29
Annex ZA (informative) Relationship between this European Standard and the Essential Requirements of EU Directive 2008/57/EC	31
Bibliography	34