

# DIN EN 16334-1:2022-07 (E)

## Railway applications - Passenger Alarm System - Part 1: System requirements for mainline rail (includes Amendment A1:2022)

---

<b>Contents</b>	<b>Page</b>
European foreword.....	4
<b>1 Scope.....</b>	<b>5</b>
<b>2 Normative references.....</b>	<b>5</b>
<b>3 Terms and definitions.....</b>	<b>6</b>
<b>4 Symbols and abbreviated terms.....</b>	<b>7</b>
<b>5 System overview, architecture and interfaces.....</b>	<b>7</b>
<b>6 Functional requirements.....</b>	<b>7</b>
<b>6.1 General.....</b>	<b>7</b>
<b>6.2 Advise the driver (and optionally on board staff members or control centre) of a potential danger.....</b>	<b>8</b>
<b>6.3 Advise the passenger.....</b>	<b>9</b>
<b>6.4 Manage PAS communication.....</b>	<b>10</b>
<b>6.5 Determine if the train is stopped at a platform or departing from a platform.....</b>	<b>10</b>
<b>6.6 Recognize the action of the driver.....</b>	<b>11</b>
<b>6.7 Request brake action.....</b>	<b>11</b>
<b>6.8 PAS actions after PAD activation.....</b>	<b>11</b>
<b>6.9 PAS power up in the active cab or train reconfiguration.....</b>	<b>12</b>
<b>6.10 Driver acknowledgement.....</b>	<b>12</b>
<b>6.11 Overriding PAS brake request.....</b>	<b>12</b>
<b>6.12 Reset the PAS.....</b>	<b>13</b>
<b>7 Event sequence.....</b>	<b>13</b>
<b>8 Degraded modes.....</b>	<b>13</b>
<b>8.1 PAS degraded mode: isolated or not functioning.....</b>	<b>13</b>
<b>8.2 Advising the driver.....</b>	<b>13</b>
<b>9 Minimum safety requirements.....</b>	<b>14</b>
<b>10 Requirements for PAD.....</b>	<b>14</b>
<b>10.1 Installation requirements.....</b>	<b>14</b>
<b>10.2 Passenger interface.....</b>	<b>15</b>
<b>10.2.1 PAD.....</b>	<b>15</b>
<b>10.2.2 Information labels.....</b>	<b>16</b>
<b>Annex A (normative) PAS information management.....</b>	<b>18</b>
<b>Annex B (normative) PAS brake request management.....</b>	<b>20</b>
<b>Annex C (normative) Sign indicating the reset equipment for the local PAD.....</b>	<b>21</b>
<b>Annex D (informative) Square key to restore the passenger emergency brake PAD in the initial position (mandatory for international service trains).....</b>	<b>23</b>
<b>Annex E (informative) System overview.....</b>	<b>24</b>
<b>E.1 General.....</b>	<b>24</b>

<b>E.2</b>	<b>System architecture</b> .....	<b>25</b>
<b>Annex F</b>	<b>(normative) Overall dimension of the PAD handle interface</b> .....	<b>26</b>
<b>Annex G</b>	<b>(informative) Inscription indicating the PAD</b> .....	<b>27</b>
<b>Annex H</b>	<b>(informative) Label for PAD</b> .....	<b>28</b>
<b>Annex I</b>	<b>(informative) Degraded mode</b> .....	<b>30</b>
<b>Annex ZA</b>	<b>(informative) Relationship between this European Standard and the Essential Requirements of EU Directive 2016/797/EU aimed to be covered</b> .....	<b>33</b>
<b>Bibliography</b>	<b>.....</b>	<b>35</b>