

DIN EN ISO 4126-10:2024-09 (E)

Safety devices for protection against excessive pressure - Part 10: Sizing of safety valves and bursting discs for gas/liquid two-phase flow (ISO 4126-10:2024)

Contents		Page
European foreword.....		4
Annex ZA (informative) Relationship between this European Standard and the essential safety requirements of Directive 2014/68/EU (Pressure Equipment Directive) aimed to be covered		5
Foreword.....		7
Introduction.....		8
1	Scope	9
2	Normative references	9
3	Terms and definitions	9
3.1	General.....	9
3.2	Pressure.....	10
3.3	Flow rate.....	12
3.4	Flow area.....	13
3.5	Fluid state.....	13
3.6	Temperature.....	13
4	Symbols and abbreviated terms and figures	14
4.1	Symbols.....	14
4.2	Abbreviated terms.....	16
4.3	Figures.....	17
5	Application range of the method	19
5.1	General.....	19
5.2	Limitations of the method for calculating the two-phase mass flux in safety devices.....	19
5.2.1	Flashing flow.....	19
5.2.2	Condensing flow.....	20
5.2.3	Flashing flow for multi-component liquids.....	20
5.2.4	Dissolved gases.....	20
5.2.5	Compressibility coefficient ω	21
5.3	Limitations of the method for calculating the mass flow rate required to be discharged.....	21
5.3.1	Rate of temperature and pressure increase.....	21
5.3.2	Immiscible liquids.....	21
6	Sizing steps	21
6.1	General outline of sizing steps.....	21
6.2	Step 1 — Identification of the sizing case.....	22
6.3	Step 2 — Flow regime at the inlet of the vent line system.....	23
6.3.1	General.....	23
6.3.2	Phenomenon of level swell.....	23
6.3.3	Influence of liquid viscosity and foaming behaviour on the flow regime.....	23
6.3.4	Prediction of the flow regime (gas/vapour or two-phase flow).....	25
6.4	Step 3 — Calculation of the mass flow rate required to be discharged.....	28
6.4.1	General.....	28
6.4.2	Pressure increase caused by an excess in-flow.....	28
6.4.3	Pressure increase due to external heating.....	30
6.4.4	Pressure increase due to thermal runaway reactions.....	33
6.5	Step 4 — Calculation of the dischargeable mass flux through and pressure change in the vent line system.....	37

6.5.1	General	37
6.5.2	Two-phase flow discharge coefficient, $K_{dr,2ph}$	40
6.5.3	Dimensionless mass flow rate, C	41
6.5.4	Compressibility coefficient, ω (numerical method)	42
6.5.5	Calculation of the downstream stagnation condition	43
6.5.6	Slip correction for non-flashing two-phase flow	43
6.5.7	Slip correction for two-phase flow in straight pipes	44
6.6	Step 5 — Ensure proper operation of safety valve vent line systems under plant conditions	44
6.7	Simultaneous calculation of the dischargeable mass flux and pressure change in the vent line system	44
6.8	Summary of calculation procedure	45
Annex A (informative) Identification of sizing scenarios		51
Annex B (informative) Example calculation of the mass flow rate to be discharged		53
Annex C (informative) Example of calculation of the dischargeable mass flux and pressure change through connected vent line systems		57
Annex D (informative) Environmental factor		74
Bibliography		75