

ISO 4126-6:2003-12 (E)

Safety devices for protection against excessive pressure - Part 6: Application, selection and installation of bursting disc safety devices

| Contents | | Page |
|--|---|-------------|
| Foreword | | v |
| Introduction | | vi |
| 1 | Scope | 1 |
| 2 | Normative references | 1 |
| 3 | Terms and definitions | 1 |
| 4 | Symbols and units | 5 |
| 5 | Application | 6 |
| 6 | Selection | 7 |
| 6.1 | Selection of bursting disc safety devices | 7 |
| 6.2 | Selection of the performance tolerance | 8 |
| 7 | Installation | 11 |
| 7.1 | General | 11 |
| 7.2 | Location of bursting disc safety devices | 11 |
| 7.3 | Installation of bursting disc safety devices | 12 |
| Annex A (informative) Information to be supplied by the purchaser | | 13 |
| A.1 | General | 13 |
| A.2 | Application details | 13 |
| A.3 | Bursting disc safety device operating details | 13 |
| A.4 | Installation details | 13 |
| A.5 | Special details | 14 |
| A.6 | Language | 14 |
| A.7 | Replacement bursting discs | 14 |
| Annex B (informative) Guidelines for determining the replacement period of a bursting disc | | 15 |
| B.1 | Introduction | 15 |
| B.2 | Bursting disc safety devices | 15 |
| B.3 | Replacement period | 15 |
| B.4 | Methods of determining the replacement period | 16 |
| Annex C (informative) Pressure relief system discharge capacity | | 17 |
| C.1 | General | 17 |
| C.2 | Simplified approach | 17 |
| C.3 | Comprehensive approach | 21 |
| Annex D (informative) Derivation of compressibility factor Z | | 23 |
| Annex E (informative) Flow testing of bursting disc safety devices | | 24 |
| E.1 | Scope | 24 |

| | | |
|-----|--|----|
| E.2 | Test requirements | 24 |
| E.3 | Method of testing | 27 |
| E.4 | Test procedure | 28 |
| E.5 | Determination of flow resistance factor KR | 29 |
| E.6 | Application of flow resistance factor KR | 32 |
| | Bibliography | 33 |