

# ISO 668:2020-01 (E)

## Series 1 freight containers - Classification, dimensions and ratings

---

<b>Contents</b>		<b>Page</b>
Foreword .....		iv
<b>1</b>	<b>Scope .....</b>	<b>1</b>
<b>2</b>	<b>Normative references .....</b>	<b>1</b>
<b>3</b>	<b>Terms and definitions .....</b>	<b>1</b>
<b>4</b>	<b>Classification and designation .....</b>	<b>2</b>
<b>5</b>	<b>Dimensions, tolerances and ratings .....</b>	<b>3</b>
<b>5.1</b>	<b>Reference temperature for measurements .....</b>	<b>3</b>
<b>5.2</b>	<b>External dimensions, tolerances and ratings .....</b>	<b>3</b>
<b>5.2.1</b>	<b>External dimensions and tolerances .....</b>	<b>3</b>
<b>5.2.2</b>	<b>Ratings .....</b>	<b>3</b>
<b>5.2.3</b>	<b>Gooseneck tunnels .....</b>	<b>4</b>
<b>5.3</b>	<b>Internal dimensions and door openings .....</b>	<b>4</b>
<b>5.3.1</b>	<b>Dimensions with projecting top corner fitting .....</b>	<b>4</b>
<b>5.3.2</b>	<b>General cargo containers for general purposes (see ISO 1496-1) .....</b>	<b>4</b>
<b>5.3.3</b>	<b>Thermal containers (see ISO 1496-2) .....</b>	<b>4</b>
<b>5.3.4</b>	<b>Other types of container .....</b>	<b>5</b>
<b>5.4</b>	<b>Corner fitting locations .....</b>	<b>5</b>
<b>Annex A (normative)</b>	<b>Corner fittings .....</b>	<b>7</b>
<b>Annex B (normative)</b>	<b>Details of requirements for load transfer areas in base structures of containers .....</b>	<b>9</b>
<b>Annex C (normative)</b>	<b>Dimensions of gooseneck tunnels .....</b>	<b>15</b>
<b>Bibliography .....</b>		<b>17</b>