

# DIN EN 13044-2:2011-04 (E)

## Intermodal Loading Units - Marking - Part 2: Markings of swap bodies related to rail operation

---

<b>Contents</b>		<b>Page</b>
Foreword .....		3
Introduction .....		4
<b>1</b>	<b>Scope .....</b>	<b>5</b>
<b>2</b>	<b>Normative references .....</b>	<b>5</b>
<b>3</b>	<b>Terms and definitions .....</b>	<b>6</b>
<b>4</b>	<b>Operational markings .....</b>	<b>6</b>
<b>4.1</b>	<b>Purpose of the operational markings .....</b>	<b>6</b>
<b>4.2</b>	<b>Structure of the operational marking .....</b>	<b>6</b>
<b>5</b>	<b>Location of the marking .....</b>	<b>9</b>
<b>6</b>	<b>Assignment of the profile code .....</b>	<b>9</b>
<b>7</b>	<b>Allocation bodies for coding and their responsibilities .....</b>	<b>9</b>
<b>8</b>	<b>Other operational marks .....</b>	<b>9</b>
<b>8.1</b>	<b>General .....</b>	<b>9</b>
<b>8.2</b>	<b>Maximum gross and tare masses .....</b>	<b>10</b>
<b>8.3</b>	<b>Warning sign for not allowed stacking configurations .....</b>	<b>10</b>
<b>8.4</b>	<b>Warning; Electricity .....</b>	<b>10</b>
<b>9</b>	<b>Design of the markings .....</b>	<b>10</b>
<b>9.1</b>	<b>Size and colour of the markings .....</b>	<b>10</b>
<b>9.2</b>	<b>Display and location of the markings .....</b>	<b>10</b>
<b>9.2.1</b>	<b>General .....</b>	<b>10</b>
<b>9.2.2</b>	<b>Location .....</b>	<b>10</b>
<b>Annex A (normative)</b>	<b>Warning; Electricity .....</b>	<b>11</b>
<b>Bibliography .....</b>		<b>12</b>