

ISO 13209-4:2021 (E)

Road vehicles — Open Test sequence eXchange format (OTX) — Part 4: Expanded extensions interface definition

Contents

| | |
|---------|--|
| | Foreword |
| | Introduction |
| 1 | Scope |
| 2 | Normative references |
| 3 | Terms, definitions and abbreviated terms |
| 3.1 | Terms and definitions |
| 3.2 | Abbreviated terms |
| 4 | Requirements |
| 4.1 | Basic principles for requirements definition |
| 4.2 | Requirement listing |
| 4.2.1 | Assertion requirements |
| 4.2.1.1 | A01 – Add assertions to OTX procedures to verify correctness |
| 4.2.2 | BlackBox requirements |
| 4.2.2.1 | BB01 – Transport unknown data types |
| 4.2.3 | BusMonitoring requirements |
| 4.2.3.1 | BM01 – Bus monitoring |
| 4.2.3.2 | BM02 – Bus tracing |
| 4.2.4 | ComInterface requirements |
| 4.2.4.1 | CI01 – Get communication interfaces and their resources at runtime and use them |
| 4.2.4.2 | CI02 – Using of communication interfaces methods |
| 4.2.4.3 | CI03 – Activate and deactivate Ethernet |
| 4.2.5 | CommonDialogs requirements |
| 4.2.5.1 | CD01 – It shall be possible to select a file system resource for the purposes of loading or saving file(s) |
| 4.2.6 | DataType requirements |
| 4.2.6.1 | DT01 – Efficient access to named collections (enumeration) |
| 4.2.6.2 | DT02 – Support of structures |
| 4.2.7 | DiagComPlus requirements |
| 4.2.7.1 | DCP01 – Creating diag:ComChannel without starting communication |
| 4.2.7.2 | DCP02 – Getting the state of an initialised diag:ComChannel |
| 4.2.7.3 | DCP03 – Getting all ComParameters as otx:List |
| 4.2.7.4 | DCP04 – Executing a functional hex service and getting responses of each ECU that responded |
| 4.2.7.5 | DCP05 – Start and stop communication |
| 4.2.8 | DiagConfiguration requirements |
| 4.2.8.1 | DC01 – Selecting the diagnostic project that contains the diagnostic database |
| 4.2.8.2 | DC02 – Selecting the vehicle information that contains the settings of the diagnostic database |
| 4.2.9 | DiagDataBrowsingPlus requirements |
| 4.2.9.1 | DDBP01 – Reading static information for MCDDbParameter |
| 4.2.9.2 | DDBP02 – Reading static information for MCDDbTable |
| 4.2.9.3 | DDBP03 – Reading static information for MCDDbEnvDataDesc |
| 4.2.9.4 | DDBP04 – Reading static information for MCDDbDiagTroubleCode |
| 4.2.9.5 | DDBP05 – Reading static information for MCDDbFaultMemory |
| 4.2.9.6 | DDBP06 – Reading static information for MCDDbMatchingParameter |
| 4.2.9.7 | DDBP07 – Reading static information for MCDDbSpecialDataElement |
| 4.2.9.8 | DDBP08 – Reading static information for MCDDbSpecialDataGroup |
| 4.2.9.9 | DDBP09 – Reading static information for MCDDbTextTableElement |

- 4.2.9.10 DDBP10 – Reading static information for MCDInterval
- 4.2.9.11 DDBP11 – Reading static information for MCDDbSubComponent
- 4.2.10 ECUConfiguration requirements
- 4.2.10.1 EC01 – Configuration of an ECU by using a database (ODX-E file)
- 4.2.11 EventPlus requirements
- 4.2.11.1 EP01 – Monitor changes on variables of complex types
- 4.2.12 ExternalServiceProvider requirements
- 4.2.12.1 ESP01 – Add method calls of encapsulated libraries into OTX test sequences
- 4.2.12.2 ESP02 – Add a proprietary test sequence into an OTX test sequence
- 4.2.12.3 ESP03 – Add any external functionality to an OTX test sequence
- 4.2.13 File requirements
- 4.2.13.1 F01 – Read and write textual files
- 4.2.13.2 F02 – Read and write binary files
- 4.2.14 FlashPlus requirements
- 4.2.14.1 FP01 – Enable latebound flashing (select binary file while execution of a test)
- 4.2.15 Persistence requirements
- 4.2.15.1 P01 – It shall be possible to save and load the value of all SimpleTypes and ByteField using persistent storage
- 4.2.15.2 P02 – It shall be possible to save and load collection types (list and map) using persistent storage if the contents of the collections can also be persisted
- 4.2.15.3 P03 – It shall be possible for OTX Extensions to define additional data types that can persist
- 4.2.16 SQL requirements
- 4.2.16.1 SQL01 – Establishing database connections
- 4.2.16.2 SQL02 – Executing of database commands
- 4.2.16.3 SQL03 – Retrieving results of a database command
- 4.2.16.4 SQL04 – Retrieving results shall be possible synchronously and asynchronously
- 4.2.17 StateMachineProcedure requirements
- 4.2.17.1 SMP01 – Description of state based workflows
- 4.2.18 StateVariable requirements
- 4.2.18.1 SV01 – Support for state variables, which are the counterpart of context variables
- 4.2.19 TestResultHandling requirements
- 4.2.19.1 RH01 – Capturing of test result data
- 4.2.19.2 RH02 – Evaluation of test result data
- 4.2.19.3 RH03 – Summarising of test results in groups
- 4.2.19.4 RH04 – Defining different test result levels
- 4.2.19.5 RH05 – Multiple test instances
- 4.2.20 Util requirements
- 4.2.20.1 U01 – Copying otx:ByteFields
- 4.2.20.2 U02 – Comparing values of complex types
- 4.2.20.3 U03 – Getting a random number
- 4.2.20.4 U04 – Checking a variable's status
- 4.2.20.5 U05 – Simplify analysing the content of a list
- 4.2.20.6 U06 – More possibilities to format a string
- 4.2.21 VehicleInfo requirements
- 4.2.21.1 VI01 – Getting the gateway mode of an ECU
- 4.2.21.2 VI02 – Getting names of gateways that accesses an ECU
- 4.2.21.3 VI03 – Checking if ECU is accessed via gateways
- 4.2.22 XML requirements
- 4.2.22.1 X01 – The user shall be able to set XML processing Instructions
- 4.2.22.2 X02 – The user shall be able to edit attributes, nodes and node text values
- 4.2.22.3 X03 – The user shall be able to add comments to an XML document
- 4.2.22.4 X04 – The user shall be able to remove attributes and nodes
- 4.2.22.5 X05 – Validation of an XML document
- 4.2.22.6 X06 – The user shall be able to define the document encoding and version
- 4.2.22.7 X07 – The user shall be able to parse XML content from file or ByteField
- 4.2.22.8 X08 – The user shall be able to query XML elements by XPath
- 4.2.23 ZipHandling requirements
- 4.2.23.1 Z01 – Functionality shall be provided to extract a zip file
- 4.2.23.2 Z02 – Filter functionality for the file compress and decompress process shall be provided
- 4.2.23.3 Z03 – The user shall decide whether existing files should be overwritten by the decompress process.

- 4.2.23.4 Z04 – The user shall decide whether the target zip file should be overwritten by the compress process
- 4.2.23.5 Z05 – The zip file shall be a URI
- 5 Extension overview
 - 5.1 General
 - 5.2 Dependencies
 - 5.3 OTX packaging (PTX)
- 6 OTX Assertion extension
 - 6.1 General
 - 6.2 Exceptions
 - 6.2.1 Exceptions overview
 - 6.2.2 Exceptions syntax
 - 6.2.3 Exceptions semantics
 - 6.2.3.1 General
 - 6.2.3.2 AssertionException
 - 6.3 Actions
 - 6.3.1 Actions overview
 - 6.3.2 Actions syntax
 - 6.3.3 Actions general semantics
 - 6.3.3.1 Assert
- 7 OTX BlackBox extension
 - 7.1 General
 - 7.2 Datatypes
 - 7.2.1 Datatypes overview
 - 7.2.2 Datatypes syntax
 - 7.2.3 Datatypes semantics
 - 7.2.3.1 BlackBox
 - 7.3 Variable access
 - 7.3.1 Variable-access overview
 - 7.3.2 Variable-access syntax
 - 7.3.3 Variable-access semantics
 - 7.4 Terms
 - 7.4.1 Terms overview
 - 7.4.2 Terms syntax
 - 7.4.3 Terms general semantics
 - 7.4.3.1 BlackBoxTerm
 - 7.4.3.2 BlackBoxValue
- 8 OTX BusMonitoring extension
 - 8.1 General
 - 8.2 Datatypes
 - 8.2.1 Datatypes overview
 - 8.2.2 Datatypes syntax
 - 8.2.3 Datatypes semantics
 - 8.2.3.1 BusFrame
 - 8.2.3.2 BusMonitor
 - 8.2.3.3 BusMonitorMode
 - 8.3 Enumerations
 - 8.3.1 Enumerations syntax
 - 8.3.2 Enumerations semantics
 - 8.3.2.1 BusMonitorModes
 - 8.4 Exceptions
 - 8.4.1 Exceptions overview
 - 8.4.2 Exceptions syntax
 - 8.4.3 Exceptions semantics
 - 8.4.3.1 General
 - 8.4.3.2 BusMonitoringException
 - 8.4.3.3 NotSupportedException
 - 8.5 Variable access
 - 8.5.1 Variable-access overview
 - 8.5.2 Variable-access syntax

| | |
|----------|--------------------------------|
| 8.5.3 | Variable-access semantics |
| 8.6 | Actions |
| 8.6.1 | Actions overview |
| 8.6.2 | Actions syntax |
| 8.6.3 | Actions general semantics |
| 8.6.3.1 | StartBusMonitoring |
| 8.6.3.2 | StopBusMonitoring |
| 8.7 | Terms |
| 8.7.1 | Terms overview |
| 8.7.2 | Terms syntax |
| 8.7.3 | Terms general semantics |
| 8.7.3.1 | BusFrameTerm |
| 8.7.3.2 | BusFrameValue |
| 8.7.3.3 | BusMonitorEventSource |
| 8.7.3.4 | BusMonitorModeLiteral |
| 8.7.3.5 | BusMonitorModeTerm |
| 8.7.3.6 | BusMonitorModeValue |
| 8.7.3.7 | BusMonitorTerm |
| 8.7.3.8 | BusMonitorValue |
| 8.7.3.9 | FetchBusMonitorBusFrames |
| 8.7.3.10 | GetBusFrameAddress |
| 8.7.3.11 | GetBusFrameAsString |
| 8.7.3.12 | GetBusFrameData |
| 8.7.3.13 | GetBusFrameTimestamp |
| 8.7.3.14 | GetBusFrameType |
| 8.7.3.15 | IsBusMonitorEvent |
| 9 | OTX ComInterface extension |
| 9.1 | General |
| 9.2 | Datatypes |
| 9.2.1 | Datatypes overview |
| 9.2.2 | Datatypes syntax |
| 9.2.3 | Datatypes semantics |
| 9.2.3.1 | ComInterface |
| 9.2.3.2 | ConnectionStatus |
| 9.3 | Enumerations |
| 9.3.1 | Enumerations syntax |
| 9.3.2 | Enumerations semantics |
| 9.3.2.1 | ConnectionStates |
| 9.4 | Exceptions |
| 9.4.1 | Exceptions overview |
| 9.4.2 | Exceptions syntax |
| 9.4.3 | Exceptions semantics |
| 9.4.3.1 | General |
| 9.4.3.2 | ActivateEthernetException |
| 9.4.3.3 | ComInterfaceException |
| 9.4.3.4 | DataException |
| 9.4.3.5 | NoDefaultComInterfaceException |
| 9.4.3.6 | NotConnectedException |
| 9.4.3.7 | TLSException |
| 9.5 | Variable access |
| 9.5.1 | Variable-access overview |
| 9.5.2 | Variable-access syntax |
| 9.5.3 | Variable-access semantics |
| 9.6 | Actions |
| 9.6.1 | Actions overview |
| 9.6.2 | Actions syntax |
| 9.6.3 | Actions general semantics |
| 9.6.3.1 | ActivateEthernet |
| 9.6.3.2 | CloseComInterface |
| 9.6.3.3 | ConnectComInterface |
| 9.6.3.4 | DeactivateEthernet |
| 9.6.3.5 | TlsSetCertificate |
| 9.7 | Terms |

| | |
|-----------|-------------------------------------|
| 9.7.1 | Terms overview |
| 9.7.2 | Terms syntax |
| 9.7.3 | Semantics for ComInterface terms |
| 9.7.3.1 | ComInterfaceTerm |
| 9.7.3.2 | ComInterfaceValue |
| 9.7.3.3 | CreateComChannelFromComInterface |
| 9.7.3.4 | GetBatteryVoltage |
| 9.7.3.5 | GetComChannelFromComInterface |
| 9.7.3.6 | GetComInterface |
| 9.7.3.7 | GetComInterfaceNameListFromEthernet |
| 9.7.3.8 | GetComInterfaceProperties |
| 9.7.3.9 | GetComInterfaceResourceNameList |
| 9.7.3.10 | GetIgnitionState |
| 9.7.3.11 | IsInterfaceConnected |
| 9.7.3.12 | IsSecuredDoipSessionActive |
| 9.7.4 | Semantics for Enumeration terms |
| 9.7.4.1 | ConnectionStatusLiteral |
| 9.7.4.2 | ConnectionStatusTerm |
| 9.7.4.3 | ConnectionStatusValue |
| 9.7.5 | Terms general semantics |
| 9.7.5.1 | GetComInterfaceNameList |
| 9.7.5.2 | GetDefaultComInterfaceName |
| 10 | OTX CommonDialogs extension |
| 10.1 | General |
| 10.2 | Exceptions |
| 10.2.1 | Exceptions overview |
| 10.2.2 | Exceptions syntax |
| 10.2.3 | Exceptions semantics |
| 10.2.3.1 | General |
| 10.2.3.2 | CommonDialogsException |
| 10.3 | Actions |
| 10.3.1 | Actions overview |
| 10.3.2 | Actions syntax |
| 10.3.3 | Actions general semantics |
| 10.3.3.1 | FileOpenDialog |
| 10.3.3.2 | FileSaveDialog |
| 10.3.3.3 | SelectDirectoryDialog |
| 11 | OTX DataType extension |
| 11.1 | General |
| 11.2 | Datatypes |
| 11.2.1 | Datatypes overview |
| 11.2.2 | Datatypes syntax |
| 11.2.3 | Datatypes semantics |
| 11.2.3.1 | Enumeration |
| 11.2.3.2 | ResourceLocation |
| 11.2.3.3 | Structure |
| 11.3 | Exceptions |
| 11.3.1 | Exceptions overview |
| 11.3.2 | Exceptions syntax |
| 11.3.3 | Exceptions semantics |
| 11.3.3.1 | General |
| 11.3.3.2 | DataTypeException |
| 11.4 | Variable access |
| 11.4.1 | Variable-access overview |
| 11.4.2 | Variable-access syntax |
| 11.4.3 | Variable-access semantics |
| 11.5 | Declaration and arguments |
| 11.5.1 | Declaration and arguments syntax |
| 11.5.2 | Declaration and arguments semantics |
| 11.6 | Signatures |
| 11.6.1 | Signatures overview |
| 11.6.2 | Signatures syntax |

| | |
|----------|-------------------------------------|
| 11.6.3 | Semantics for Enumerations |
| 11.6.3.1 | EnumerationSignature |
| 11.6.4 | Semantics for Structures |
| 11.6.4.1 | StructureSignature |
| 11.7 | Terms |
| 11.7.1 | Terms overview |
| 11.7.2 | Terms syntax |
| 11.7.3 | Semantics for EnumerationTerms |
| 11.7.3.1 | EnumerationContainsName |
| 11.7.3.2 | EnumerationContainsValue |
| 11.7.3.3 | EnumerationGetEntryList |
| 11.7.3.4 | EnumerationLiteral |
| 11.7.3.5 | EnumerationTerm |
| 11.7.3.6 | EnumerationValue |
| 11.7.3.7 | GetEnumerationByName |
| 11.7.3.8 | GetEnumerationByValue |
| 11.7.4 | Semantics for ResourceLocationTerms |
| 11.7.4.1 | CreateResourceLocation |
| 11.7.4.2 | GetResourceLocationId |
| 11.7.4.3 | IsResourceLocationMapped |
| 11.7.4.4 | ResourceLocationLiteral |
| 11.7.4.5 | ResourceLocationTerm |
| 11.7.4.6 | ResourceLocationValue |
| 11.7.5 | Semantics for StructureTerms |
| 11.7.5.1 | StructureCopy |
| 11.7.5.2 | StructureCreate |
| 11.7.5.3 | StructureTerm |
| 11.7.5.4 | StructureValue |
| 12 | OTX DiagComPlus extension |
| 12.1 | General |
| 12.2 | Datatypes |
| 12.2.1 | Datatypes overview |
| 12.2.2 | Datatypes syntax |
| 12.2.3 | Datatypes semantics |
| 12.2.3.1 | ComChannelState |
| 12.3 | Enumerations |
| 12.3.1 | Enumerations syntax |
| 12.3.2 | Enumerations semantics |
| 12.3.2.1 | ComChannelStates |
| 12.4 | Exceptions |
| 12.4.1 | Exceptions overview |
| 12.4.2 | Exceptions syntax |
| 12.4.3 | Exceptions semantics |
| 12.4.3.1 | General |
| 12.4.3.2 | DiagComPlusException |
| 12.5 | Variable access |
| 12.5.1 | Variable-access overview |
| 12.5.2 | Variable-access syntax |
| 12.5.3 | Variable-access semantics |
| 12.6 | Actions |
| 12.6.1 | Actions overview |
| 12.6.2 | Actions syntax |
| 12.6.3 | Actions general semantics |
| 12.6.3.1 | ExecuteHexDiagServiceFunctional |
| 12.6.3.2 | StartCommunication |
| 12.6.3.3 | StopCommunication |
| 12.7 | Terms |
| 12.7.1 | Terms overview |
| 12.7.2 | Terms syntax |
| 12.7.3 | Terms general semantics |
| 12.7.3.1 | ComChannelStateLiteral |
| 12.7.3.2 | ComChannelStateTerm |
| 12.7.3.3 | ComChannelStateValue |

- 12.7.3.4 CreateComChannel
- 12.7.3.5 GetComChannelState
- 12.7.3.6 GetComParameterList
- 12.7.3.7 GetResponseTimestamp
- 13 OTX DiagConfiguration extension
 - 13.1 General
 - 13.2 Exceptions
 - 13.2.1 Exceptions overview
 - 13.2.2 Exceptions syntax
 - 13.2.3 Exceptions semantics
 - 13.2.3.1 General
 - 13.2.3.2 ProjectChangeException
 - 13.2.3.3 DiagConfigurationException
 - 13.3 Actions
 - 13.3.1 Actions overview
 - 13.3.2 Actions syntax
 - 13.3.3 Actions general semantics
 - 13.3.3.1 SelectProject
 - 13.3.3.2 SelectVehicleInformation
 - 13.4 Terms
 - 13.4.1 Terms overview
 - 13.4.2 Terms syntax
 - 13.4.3 Terms general semantics
 - 13.4.3.1 GetActiveProject
 - 13.4.3.2 GetActiveProjectVersion
 - 13.4.3.3 GetActiveVehicleInformation
 - 13.4.3.4 GetDbProjectList
 - 13.4.3.5 GetDbVehicleInformationList
- 14 OTX DiagDataBrowsingPlus extension
 - 14.1 General
 - 14.2 Datatypes
 - 14.2.1 Datatypes overview
 - 14.2.2 Datatypes syntax
 - 14.2.3 Datatypes semantics
 - 14.2.3.1 DbComChannel
 - 14.2.3.2 DbDiagService
 - 14.2.3.3 DbDiagTroubleCode
 - 14.2.3.4 DbEnvDataDesc
 - 14.2.3.5 DbFaultMemory
 - 14.2.3.6 DbMatchingParameter
 - 14.2.3.7 DbObject
 - 14.2.3.8 DbParameter
 - 14.2.3.9 DbRequest
 - 14.2.3.10 DbResponse
 - 14.2.3.11 DbSpecialDataElement
 - 14.2.3.12 DbSpecialDataGroup
 - 14.2.3.13 DbSubComponent
 - 14.2.3.14 DbTable
 - 14.2.3.15 Interval
 - 14.2.3.16 McdDataType
 - 14.2.3.17 McdParameterType
 - 14.2.3.18 McdResponseType
 - 14.2.3.19 TextTableElement
 - 14.3 Enumerations
 - 14.3.1 Enumerations syntax
 - 14.3.2 Enumerations semantics
 - 14.3.2.1 McdDataTypes
 - 14.3.2.2 McdParameterTypes
 - 14.3.2.3 McdResponseTypes
 - 14.4 Exceptions
 - 14.4.1 Exceptions overview
 - 14.4.2 Exceptions syntax

- 14.4.3 Exceptions semantics
 - 14.4.3.1 General
 - 14.4.3.2 DiagDataBrowsingPlusException
 - 14.4.3.3 InvalidTypeException
 - 14.4.3.4 NotSupportedException
- 14.5 Variable access
 - 14.5.1 Variable-access overview
 - 14.5.2 Variable-access syntax
 - 14.5.3 Variable-access semantics
- 14.6 Terms
 - 14.6.1 Terms overview
 - 14.6.2 Semantics for DbComChannel terms
 - 14.6.2.1 DbComChannelTerm
 - 14.6.2.2 DbComChannelValue
 - 14.6.2.3 GetComChannelDbComChannel
 - 14.6.2.4 GetDbComChannel
 - 14.6.2.5 GetDbComChannelProtocolType
 - 14.6.3 Semantics for DbDiagService terms
 - 14.6.3.1 DbDiagServiceTerm
 - 14.6.3.2 DbDiagServiceValue
 - 14.6.3.3 GetDbComChannelDbDiagServices
 - 14.6.3.4 GetDbDiagServiceAudienceStates
 - 14.6.3.5 GetDbDiagServiceDbFunctionalClasses
 - 14.6.3.6 GetDbDiagServiceDbPreConditionStatesBySemantic
 - 14.6.3.7 GetDbDiagServiceDisabledAdditionalAudiences
 - 14.6.3.8 GetDbDiagServiceEnabledAdditionalAudiences
 - 14.6.3.9 GetDbDiagServiceIsApiExecutable
 - 14.6.3.10 GetDbDiagServiceSemantic
 - 14.6.3.11 GetDiagServiceDbDiagService
 - 14.6.3.12 IsDbDiagServiceJob
 - 14.6.3.13 IsDbDiagServiceRepetitive
 - 14.6.4 Semantics for DbDiagTroubleCode terms
 - 14.6.4.1 DbDiagTroubleCodeTerm
 - 14.6.4.2 DbDiagTroubleCodeValue
 - 14.6.4.3 GetDbDiagTroubleCodeDisplayTroubleCode
 - 14.6.4.4 GetDbDiagTroubleCodeDTCText
 - 14.6.4.5 GetDbDiagTroubleCodeLevel
 - 14.6.4.6 GetDbDiagTroubleCodeSpecialDataGroups
 - 14.6.4.7 GetDbDiagTroubleCodeTextId
 - 14.6.4.8 GetDbDiagTroubleCodeTroubleCode
 - 14.6.4.9 GetParameterDbDiagTroubleCode
 - 14.6.5 Semantics for DbEcuVariant terms
 - 14.6.5.1 GetDbEcuVariantList
 - 14.6.6 Semantics for DbEnvDataDesc terms
 - 14.6.6.1 DbEnvDataDescTerm
 - 14.6.6.2 DbEnvDataDescValue
 - 14.6.6.3 GetDbComChannelDbEnvDataDescs
 - 14.6.6.4 GetDbEnvDataDescCommonDbEnvDatas
 - 14.6.6.5 GetDbEnvDataDescSpecificDbEnvDatas
 - 14.6.7 Semantics for DbFaultMemory terms
 - 14.6.7.1 DbFaultMemoryTerm
 - 14.6.7.2 DbFaultMemoryValue
 - 14.6.7.3 GetDbComChannelDbFaultMemories
 - 14.6.7.4 GetDbFaultMemoryDiagTroubleCodeByTroubleCode
 - 14.6.7.5 GetDbFaultMemoryDiagTroubleCodes
 - 14.6.8 Semantics for DbMatchingParameter terms
 - 14.6.8.1 DbMatchingParameterTerm
 - 14.6.8.2 DbMatchingParameterValue
 - 14.6.8.3 GetDbMatchingParameterExpectedValueAsString
 - 14.6.9 Semantics for DbObject terms
 - 14.6.9.1 DbObjectTerm
 - 14.6.9.2 DbObjectValue
 - 14.6.9.3 GetDbObjectDescription
 - 14.6.9.4 GetDbObjectDescriptionID

- 14.6.9.5 GetDbObjectLongName
- 14.6.9.6 GetDbObjectLongNameId
- 14.6.9.7 GetDbObjectShortName
- 14.6.9.8 GetDbObjectTypeAsString
- 14.6.9.9 GetDbObjectUniqueObjectIdentifier
- 14.6.10 Semantics for DbParameter terms
- 14.6.10.1 DbParameterTerm
- 14.6.10.2 DbParameterValue
- 14.6.10.3 GetDbParameterAudienceStates
- 14.6.10.4 GetDbParameterBitLength
- 14.6.10.5 GetDbParameterBitPos
- 14.6.10.6 GetDbParameterByteLength
- 14.6.10.7 GetDbParameterCodedDefaultValueAsString
- 14.6.10.8 GetDbParameterDataType
- 14.6.10.9 GetDbParameterDecimalPlaces
- 14.6.10.10 GetDbParameterDefaultValueAsString
- 14.6.10.11 GetDbParameterDisabledAdditionalAudiences
- 14.6.10.12 GetDbParameterDisplayLevel
- 14.6.10.13 GetDbParameterDisplayUnitAsString
- 14.6.10.14 GetDbParameterEnabledAdditionalAudiences
- 14.6.10.15 GetDbParameterKeysAsString
- 14.6.10.16 GetDbParameterLengthKey
- 14.6.10.17 GetDbParameterMaxLength
- 14.6.10.18 GetDbParameterMaxNumberOfItems
- 14.6.10.19 GetDbParameterMinLength
- 14.6.10.20 GetDbParameterNrcConstValues
- 14.6.10.21 GetDbParameterODXBytePos
- 14.6.10.22 GetDbParameterRadix
- 14.6.10.23 GetDbParameters
- 14.6.10.24 GetDbParameterSemantic
- 14.6.10.25 GetDbParameterSpecialDataGroups
- 14.6.10.26 GetDbParameterStructureByKey
- 14.6.10.27 GetDbParameterTable
- 14.6.10.28 GetDbParameterTableKeyParam
- 14.6.10.29 GetDbParameterTableStructParams
- 14.6.10.30 GetParameterDbParameter
- 14.6.10.31 IsDbParameterConstant
- 14.6.10.32 IsDbParameterVariableLength
- 14.6.11 Semantics for DbRequest terms
- 14.6.11.1 DbRequestTerm
- 14.6.11.2 DbRequestValue
- 14.6.11.3 GetDbDiagServiceDbRequest
- 14.6.11.4 GetDbRequestDbParameters
- 14.6.11.5 GetDbRequestDefaultPDU
- 14.6.11.6 GetDbRequestPDUMaxLength
- 14.6.11.7 GetDbRequestPDUMinLength
- 14.6.11.8 GetRequestDbRequest
- 14.6.12 Semantics for DbResponse terms
- 14.6.12.1 DbResponseTerm
- 14.6.12.2 DbResponseValue
- 14.6.12.3 GetDbDiagServiceDbResponses
- 14.6.12.4 GetDbMatchingParameterDbResponseParameter
- 14.6.12.5 GetDbResponseDbParameters
- 14.6.12.6 GetDbResponseResponseType
- 14.6.12.7 GetResponseDbResponse
- 14.6.13 Semantics for DbSpecialDataElement terms
- 14.6.13.1 DbSpecialDataElementTerm
- 14.6.13.2 DbSpecialDataElementValue
- 14.6.13.3 GetDbSpecialDataElementContent
- 14.6.13.4 GetDbSpecialDataElementSemanticInformation
- 14.6.13.5 GetDbSpecialDataElementTextId
- 14.6.14 Semantics for DbSpecialDataGroup terms
- 14.6.14.1 DbSpecialDataGroupTerm
- 14.6.14.2 DbSpecialDataGroupValue

- 14.6.14.3 GetDbDiagServiceDbSpecialDataGroups
- 14.6.14.4 GetDbRequestDbSpecialDataGroups
- 14.6.14.5 GetDbResponseDbSpecialDataGroups
- 14.6.14.6 GetDbSpecialDataGroupCaption
- 14.6.14.7 GetDbSpecialDataGroupHasCaption
- 14.6.14.8 GetDbSpecialDataGroupSemanticInformation
- 14.6.14.9 GetDbSpecialDataGroupSpecialDataElements
- 14.6.14.10 GetDbSpecialDataGroupSpecialDataGroups
- 14.6.15 Semantics for DbSubComponent terms
- 14.6.15.1 DbSubComponentTerm
- 14.6.15.2 DbSubComponentValue
- 14.6.15.3 GetDbComChannelDbSubComponents
- 14.6.15.4 GetDbSubComponentDbDiagServices
- 14.6.15.5 GetDbSubComponentDbDiagTroubleCodes
- 14.6.15.6 GetDbSubComponentDbEnvDataDescs
- 14.6.15.7 GetDbSubComponentDbFaultMemories
- 14.6.15.8 GetDbSubComponentDbInParams
- 14.6.15.9 GetDbSubComponentDbMatchingParameters
- 14.6.15.10 GetDbSubComponentDbOutParams
- 14.6.15.11 GetDbSubComponentDbResponseParameters
- 14.6.15.12 GetDbSubComponentSemantic
- 14.6.16 Semantics for DbTable terms
- 14.6.16.1 DbTableTerm
- 14.6.16.2 DbTableValue
- 14.6.16.3 GetDbComChannelDbTables
- 14.6.16.4 GetDbSubComponentDbTableParameters
- 14.6.16.5 GetDbSubComponentDbTables
- 14.6.16.6 GetDbTableDbTableRows
- 14.6.16.7 GetDbTableDiagComPrimitiveByConnectorSemantic
- 14.6.16.8 GetDbTableDiagComPrimitives
- 14.6.16.9 GetDbTableKeys
- 14.6.16.10 GetDbTableParameterKeyAsString
- 14.6.16.11 GetDbTableSemantic
- 14.6.16.12 GetDbTableSpecialDataGroups
- 14.6.17 Semantics for interval terms
- 14.6.17.1 GetDbParameterValidInternalIntervals
- 14.6.17.2 GetDbParameterValidPhysicalIntervals
- 14.6.17.3 GetIntervalLowerLimitAsString
- 14.6.17.4 GetIntervalLowerLimitTypeAsString
- 14.6.17.5 GetIntervalUpperLimitAsString
- 14.6.17.6 GetIntervalUpperLimitTypeAsString
- 14.6.17.7 IntervalTerm
- 14.6.17.8 IntervalValue
- 14.6.18 Semantics for McdDataType terms
- 14.6.18.1 McdDataTypeLiteral
- 14.6.18.2 McdDataTypeTerm
- 14.6.18.3 McdDataTypeValue
- 14.6.19 Semantics for McdParameter terms
- 14.6.19.1 GetDbParameterMcdParameterType
- 14.6.19.2 McdParameterTypeLiteral
- 14.6.19.3 McdParameterTypeTerm
- 14.6.19.4 McdParameterTypeValue
- 14.6.20 Semantics for McdResponseType terms
- 14.6.20.1 McdResponseTypeLiteral
- 14.6.20.2 McdResponseTypeTerm
- 14.6.20.3 McdResponseTypeValue
- 14.6.21 Semantics for parameter terms
- 14.6.21.1 GetParameterDecimalPlaces
- 14.6.21.2 GetParameterDisplayUnitAsString
- 14.6.21.3 GetParameterRadix
- 14.6.21.4 IsFloatParameter
- 14.6.21.5 IsIntegerParameter
- 14.6.21.6 IsParameterConstant
- 14.6.21.7 IsTextTableParameter

| | |
|-----------|--|
| 14.6.22 | Semantics for TextTableElement terms |
| 14.6.22.1 | GetDbParameterTextTableElements |
| 14.6.22.2 | GetTextTableElementInterval |
| 14.6.22.3 | GetTextTableElementLongName |
| 14.6.22.4 | GetTextTableElementLongNameId |
| 14.6.22.5 | TextTableElementTerm |
| 14.6.22.6 | TextTableElementValue |
| 15 | OTX EcuConfiguration extension |
| 15.1 | General |
| 15.2 | Datatypes |
| 15.2.1 | Datatypes overview |
| 15.2.2 | Datatypes syntax |
| 15.2.3 | Datatypes semantics |
| 15.2.3.1 | DbConfigurationData |
| 15.2.3.2 | DbConfigurationRecord |
| 15.2.3.3 | DbDataRecord |
| 15.2.3.4 | DbItemValue |
| 15.2.3.5 | DbOptionItem |
| 15.3 | Exceptions |
| 15.3.1 | Exceptions overview |
| 15.3.2 | Exceptions syntax |
| 15.3.3 | Exceptions semantics |
| 15.3.3.1 | General |
| 15.3.3.2 | EcuConfigurationException |
| 15.4 | Variable access |
| 15.4.1 | Variable-access overview |
| 15.4.2 | Variable-access syntax |
| 15.4.3 | Variable-access semantics |
| 15.5 | Terms |
| 15.5.1 | Terms overview |
| 15.5.2 | Semantics for DbConfigurationData terms |
| 15.5.2.1 | DbConfigurationDataTerm |
| 15.5.2.2 | DbConfigurationDataValue |
| 15.5.2.3 | GetDbComChannelDbConfigurationDatas |
| 15.5.3 | Semantics for DbConfigurationRecord terms |
| 15.5.3.1 | DbConfigurationRecordTerm |
| 15.5.3.2 | DbConfigurationRecordValue |
| 15.5.3.3 | GetDbConfigurationDataDbConfigurationRecords |
| 15.5.4 | Semantics for DbDataRecord terms |
| 15.5.4.1 | DbDataRecordTerm |
| 15.5.4.2 | DbDataRecordValue |
| 15.5.4.3 | GetDbConfigurationRecordDbDataRecordByDataId |
| 15.5.4.4 | GetDbConfigurationRecordDbDataRecordByKey |
| 15.5.4.5 | GetDbConfigurationRecordDbDataRecordByName |
| 15.5.4.6 | GetDbConfigurationRecordDbDataRecordDataIds |
| 15.5.4.7 | GetDbConfigurationRecordDbDataRecordKeys |
| 15.5.4.8 | GetDbConfigurationRecordDbDataRecordNames |
| 15.5.4.9 | GetReadConfigurationServices |
| 15.5.4.10 | GetWriteConfigurationServices |
| 15.5.5 | Semantics for DbItemValue terms |
| 15.5.5.1 | DbItemValueTerm |
| 15.5.5.2 | DbItemValueValue |
| 15.5.5.3 | GetDbItemValueKey |
| 15.5.5.4 | GetDbItemValueMeaning |
| 15.5.5.5 | GetDbItemValueMeaningId |
| 15.5.5.6 | GetDbItemValuePhysicalConstantValueAsString |
| 15.5.5.7 | GetDbItemValueRule |
| 15.5.6 | Semantics for DbOptionItem terms |
| 15.5.6.1 | DbOptionItemTerm |
| 15.5.6.2 | DbOptionItemValue |
| 15.5.6.3 | GetDbConfigurationRecordDbOptionItems |
| 15.5.6.4 | GetDbOptionItemBitLength |
| 15.5.6.5 | GetDbOptionItemBitPosition |

- 15.5.6.6 GetDbOptionItemBytePosition
 - 15.5.6.7 GetDbOptionItemDataType
 - 15.5.6.8 GetDbOptionItemDbItemValues
 - 15.5.6.9 GetDbOptionItemDecimalPlaces
 - 15.5.6.10 GetDbOptionItemInterval
 - 15.5.6.11 GetDbOptionItemPhysicalDefaultValueAsString
 - 15.5.6.12 GetDbOptionItemReadAudienceState
 - 15.5.6.13 GetDbOptionItemSemantic
 - 15.5.6.14 GetDbOptionItemTextTableElements
 - 15.5.6.15 GetDbOptionItemUnitAsString
 - 15.5.6.16 GetDbOptionItemWriteAudienceState
 - 15.5.6.17 IsComplexDbOptionItem
- 16 OTX EventPlus extension
- 16.1 General
 - 16.2 Exceptions
 - 16.2.1 Exceptions overview
 - 16.2.2 Exceptions syntax
 - 16.2.3 Exceptions semantics
 - 16.2.3.1 General
 - 16.2.3.2 EventPlusException
 - 16.3 Terms
 - 16.3.1 Terms overview
 - 16.3.2 Terms syntax
 - 16.3.3 Terms general semantics
 - 16.3.3.1 DeepMonitorChangeEventSource
 - 16.3.3.2 IsDeepMonitorChangeEvent
- 17 OTX ExternalServiceProvider extension
- 17.1 General
 - 17.2 Datatypes
 - 17.2.1 Datatypes overview
 - 17.2.2 Datatypes syntax
 - 17.2.3 Datatypes semantics
 - 17.2.3.1 PropertyFlag
 - 17.2.3.2 Service
 - 17.2.3.3 ServiceProvider
 - 17.3 Enumerations
 - 17.3.1 Enumerations syntax
 - 17.3.2 Enumerations semantics
 - 17.3.2.1 PropertyFlags
 - 17.4 Exceptions
 - 17.4.1 Exceptions overview
 - 17.4.2 Exceptions syntax
 - 17.4.3 Exceptions semantics
 - 17.4.3.1 General
 - 17.4.3.2 ConfigurationException
 - 17.4.3.3 ExecuteException
 - 17.4.3.4 ExternalServiceProviderException
 - 17.4.3.5 ProviderDisposedException
 - 17.4.3.6 ProviderServiceException
 - 17.5 Variable access
 - 17.5.1 Variable-access overview
 - 17.5.2 Variable-access syntax
 - 17.5.3 Variable-access semantics
 - 17.6 Declaration and arguments
 - 17.6.1 Declaration and arguments syntax
 - 17.6.2 Declaration and arguments semantics
 - 17.7 Signatures
 - 17.7.1 Signatures overview
 - 17.7.2 Signatures syntax
 - 17.7.3 Signatures general semantics
 - 17.7.3.1 ConstructorSignature
 - 17.7.3.2 EventSignature

- 17.7.3.3 PropertyDeclaration
- 17.7.3.4 PropertyDeclarations
- 17.7.3.5 ServiceProviderSignature
- 17.7.3.6 ServiceSignature
- 17.8 Actions
- 17.8.1 Actions overview
- 17.8.2 Actions syntax
- 17.8.3 Actions general semantics
- 17.8.3.1 CreateProvider
- 17.8.3.2 DisposeProvider
- 17.8.3.3 ExecuteService
- 17.8.3.4 GetServiceProviderEventValues
- 17.8.3.5 SetProperty
- 17.8.3.6 TerminateService
- 17.9 Terms
- 17.9.1 Terms overview
- 17.9.2 Terms syntax
- 17.9.3 Semantics for Enumeration terms
- 17.9.3.1 PropertyFlagLiteral
- 17.9.3.2 PropertyFlagTerm
- 17.9.3.3 PropertyFlagValue
- 17.9.4 Semantics for External Service provider event query terms
- 17.9.4.1 GetServiceProviderFromEvent
- 17.9.4.2 IsServiceExecutionFinishedEvent
- 17.9.4.3 IsServiceProviderEvent
- 17.9.5 Semantics for External service provider event source terms
- 17.9.5.1 ServiceExecutionFinishedEventSource
- 17.9.5.2 ServiceProviderEventSource
- 17.9.6 General semantics
- 17.9.6.1 GetProperty
- 17.9.6.2 IsDisposed
- 17.9.6.3 IsServiceRunning
- 17.9.6.4 ServiceProviderTerm
- 17.9.6.5 ServiceProviderValue
- 17.9.6.6 ServiceTerm
- 17.9.6.7 ServiceValue

18 OTX File extension

- 18.1 General
- 18.2 Datatypes
- 18.2.1 Datatypes overview
- 18.2.2 Datatypes syntax
- 18.2.3 Datatypes semantics
- 18.2.3.1 FileHandle
- 18.2.3.2 FileReadHandle
- 18.2.3.3 FileWriteHandle
- 18.3 Exceptions
- 18.3.1 Exceptions overview
- 18.3.2 Exceptions syntax
- 18.3.3 Exceptions semantics
- 18.3.3.1 General
- 18.3.3.2 FileAccessException
- 18.3.3.3 FileException
- 18.3.3.4 FileFormatException
- 18.3.3.5 FileLockException
- 18.3.3.6 FileNotFoundException
- 18.3.3.7 FileOpenException
- 18.3.3.8 FileSaveException
- 18.4 Variable access
- 18.4.1 Variable-access overview
- 18.4.2 Variable-access syntax
- 18.4.3 Variable-access semantics
- 18.5 Actions
- 18.5.1 Actions overview

| | |
|-----------|---------------------------|
| 18.5.2 | Actions syntax |
| 18.5.3 | Actions general semantics |
| 18.5.3.1 | CloseFile |
| 18.5.3.2 | DeleteDirectory |
| 18.5.3.3 | DeleteFile |
| 18.5.3.4 | SaveFile |
| 18.5.3.5 | WriteBytes |
| 18.5.3.6 | WriteFile |
| 18.5.3.7 | WriteLine |
| 18.6 | Terms |
| 18.6.1 | Terms overview |
| 18.6.2 | Terms syntax |
| 18.6.3 | Terms general semantics |
| 18.6.3.1 | CreateTempDirectory |
| 18.6.3.2 | FileHandleTerm |
| 18.6.3.3 | FileReadHandleTerm |
| 18.6.3.4 | FileReadHandleValue |
| 18.6.3.5 | FileWriteHandleTerm |
| 18.6.3.6 | FileWriteHandleValue |
| 18.6.3.7 | GetDirectoryName |
| 18.6.3.8 | GetFileName |
| 18.6.3.9 | GetFilePath |
| 18.6.3.10 | GetFilesFromDirectory |
| 18.6.3.11 | GetFileSize |
| 18.6.3.12 | IsDirectory |
| 18.6.3.13 | IsEndOfFileReached |
| 18.6.3.14 | IsFile |
| 18.6.3.15 | OpenFileForRead |
| 18.6.3.16 | OpenFileForWrite |
| 18.6.3.17 | ReadBytes |
| 18.6.3.18 | ReadFile |
| 18.6.3.19 | ReadLine |
| 19 | OTX FlashPlus extension |
| 19.1 | General |
| 19.2 | Exceptions |
| 19.2.1 | Exceptions overview |
| 19.2.2 | Exceptions syntax |
| 19.2.3 | Exceptions semantics |
| 19.2.3.1 | General |
| 19.2.3.2 | FlashPlusException |
| 19.3 | Actions |
| 19.3.1 | Actions overview |
| 19.3.2 | Actions syntax |
| 19.3.3 | Actions general semantics |
| 19.3.3.1 | SetActiveFile |
| 19.4 | Terms |
| 19.4.1 | Terms overview |
| 19.4.2 | Terms syntax |
| 19.4.3 | Terms general semantics |
| 19.4.3.1 | GetActiveFileName |
| 19.4.3.2 | GetFlashDataFileNames |
| 19.4.3.3 | GetOwnIdentFromComChannel |
| 19.4.3.4 | IsLateBound |
| 20 | OTX Persistence extension |
| 20.1 | General |
| 20.2 | Exceptions |
| 20.2.1 | Exceptions overview |
| 20.2.2 | Exceptions syntax |
| 20.2.3 | Exceptions semantics |
| 20.2.3.1 | General |
| 20.2.3.2 | PersistenceException |
| 20.2.3.3 | PersistenceSaveException |

| | |
|-----------|-------------------------------------|
| 20.3 | Actions |
| 20.3.1 | Actions overview |
| 20.3.2 | Actions syntax |
| 20.3.3 | Actions general semantics |
| 20.3.3.1 | Load |
| 20.3.3.2 | Save |
| 21 | OTX SQL extension |
| 21.1 | General |
| 21.2 | Datatypes |
| 21.2.1 | Datatypes overview |
| 21.2.2 | Datatypes syntax |
| 21.2.3 | Datatypes semantics |
| 21.2.3.1 | Connection |
| 21.2.3.2 | ResultSet |
| 21.3 | Exceptions |
| 21.3.1 | Exceptions overview |
| 21.3.2 | Exceptions syntax |
| 21.3.3 | Exceptions semantics |
| 21.3.3.1 | General |
| 21.3.3.2 | CommandException |
| 21.3.3.3 | ConnectionException |
| 21.3.3.4 | SQLException |
| 21.4 | Variable access |
| 21.4.1 | Variable-access overview |
| 21.4.2 | Variable-access syntax |
| 21.4.3 | Variable-access semantics |
| 21.5 | Actions |
| 21.5.1 | Actions overview |
| 21.5.2 | Actions syntax |
| 21.5.3 | Actions general semantics |
| 21.5.3.1 | CloseConnection |
| 21.5.3.2 | ExecuteQuery |
| 21.5.3.3 | ExecuteUpdate |
| 21.6 | Terms |
| 21.6.1 | Terms overview |
| 21.6.2 | Terms syntax |
| 21.6.3 | Terms general semantics |
| 21.6.3.1 | ConnectionTerm |
| 21.6.3.2 | ConnectionValue |
| 21.6.3.3 | CreateConnection |
| 21.6.3.4 | GetResultValueAsBoolean |
| 21.6.3.5 | GetResultValueAsByteField |
| 21.6.3.6 | GetResultValueAsFloat |
| 21.6.3.7 | GetResultValueAsInteger |
| 21.6.3.8 | GetResultValueAsString |
| 21.6.3.9 | NextResult |
| 21.6.3.10 | ResultSetTerm |
| 21.6.3.11 | ResultSetValue |
| 22 | OTX StateMachineProcedure extension |
| 22.1 | General |
| 22.2 | Datatypes |
| 22.2.1 | Datatypes overview |
| 22.2.2 | Datatypes syntax |
| 22.2.3 | Datatypes semantics |
| 22.2.3.1 | State |
| 22.2.3.2 | States |
| 22.2.3.3 | Transition |
| 22.2.3.4 | Transitions |
| 22.2.3.5 | Trigger |
| 22.2.3.6 | TriggerRef |
| 22.2.3.7 | TriggerRefs |
| 22.2.3.8 | Triggers |

| | |
|-----------|-------------------------------------|
| 22.3 | Procedures |
| 22.3.1 | Procedures overview |
| 22.3.2 | Procedures syntax |
| 22.3.3 | Procedures general semantics |
| 22.3.3.1 | StateMachineProcedure |
| 22.3.3.2 | StateMachineProcedureRealisation |
| 23 | OTX StateVariable extension |
| 23.1 | General |
| 23.2 | Declaration and arguments |
| 23.2.1 | Declaration and arguments syntax |
| 23.2.2 | Declaration and arguments semantics |
| 24 | OTX TestResultHandling extension |
| 24.1 | General |
| 24.2 | Datatypes |
| 24.2.1 | Datatypes overview |
| 24.2.2 | Datatypes syntax |
| 24.2.3 | Datatypes semantics |
| 24.2.3.1 | TestResultContainer |
| 24.2.3.2 | TestResultHandlingLevel |
| 24.2.3.3 | TestResultSession |
| 24.2.3.4 | TestResultSeverity |
| 24.2.3.5 | TestResultState |
| 24.3 | Enumerations |
| 24.3.1 | Enumerations syntax |
| 24.3.2 | Enumerations semantics |
| 24.3.2.1 | TestResultHandlingLevels |
| 24.3.2.2 | TestResultSeverities |
| 24.3.2.3 | TestResultStates |
| 24.4 | Exceptions |
| 24.4.1 | Exceptions overview |
| 24.4.2 | Exceptions syntax |
| 24.4.3 | Exceptions semantics |
| 24.4.3.1 | General |
| 24.4.3.2 | TestResultContainerException |
| 24.4.3.3 | TestResultException |
| 24.4.3.4 | TestResultHandlingException |
| 24.4.3.5 | TestResultSaveException |
| 24.4.3.6 | TestResultSessionException |
| 24.5 | Variable access |
| 24.5.1 | Variable-access overview |
| 24.5.2 | Variable-access syntax |
| 24.5.3 | Variable-access semantics |
| 24.6 | Declaration and arguments |
| 24.6.1 | Declaration and arguments syntax |
| 24.6.2 | Declaration and arguments semantics |
| 24.7 | Actions |
| 24.7.1 | Actions overview |
| 24.7.2 | Actions syntax |
| 24.7.3 | Actions general semantics |
| 24.7.3.1 | AddFileToTestResult |
| 24.7.3.2 | AddInfoToTestResult |
| 24.7.3.3 | CloseTestResultSession |
| 24.7.3.4 | SetDtcTestResult |
| 24.7.3.5 | SetEqualityTestResult |
| 24.7.3.6 | SetListTestResult |
| 24.7.3.7 | SetMapTestResult |
| 24.7.3.8 | SetTestResult |
| 24.7.3.9 | SetTestResultHandlingLevel |
| 24.7.3.10 | SetTestResultState |
| 24.7.3.11 | SetToleranceTestResult |
| 24.7.3.12 | SetValueTestResult |
| 24.8 | Terms |

| | |
|-----------|---------------------------------|
| 24.8.1 | Terms overview |
| 24.8.2 | Terms syntax |
| 24.8.3 | Semantics for Enumeration terms |
| 24.8.3.1 | GetTestResultState |
| 24.8.3.2 | TestResultHandlingLevelLiteral |
| 24.8.3.3 | TestResultHandlingLevelTerm |
| 24.8.3.4 | TestResultHandlingLevelValue |
| 24.8.3.5 | TestResultSeverityLiteral |
| 24.8.3.6 | TestResultSeverityTerm |
| 24.8.3.7 | TestResultSeverityValue |
| 24.8.3.8 | TestResultStateLiteral |
| 24.8.3.9 | TestResultStateTerm |
| 24.8.3.10 | TestResultStateValue |
| 24.8.4 | Terms general semantics |
| 24.8.4.1 | GetTestResultContainerByName |
| 24.8.4.2 | GetTestResultSession |
| 24.8.4.3 | TestResultContainerTerm |
| 24.8.4.4 | TestResultContainerValue |
| 24.8.4.5 | TestResultSessionTerm |
| 24.8.4.6 | TestResultSessionValue |
| 25 | OTX Util extension |
| 25.1 | General |
| 25.2 | Exceptions |
| 25.2.1 | Exceptions overview |
| 25.2.2 | Exceptions syntax |
| 25.2.3 | Exceptions semantics |
| 25.2.3.1 | General |
| 25.2.3.2 | StringFormatException |
| 25.2.3.3 | UtilException |
| 25.3 | Terms |
| 25.3.1 | Terms overview |
| 25.3.2 | Terms syntax |
| 25.3.3 | Semantics for Util terms |
| 25.3.3.1 | ByteFieldCopy |
| 25.3.3.2 | Compare |
| 25.3.3.3 | FindRegularExpressionGroup |
| 25.3.3.4 | GetRandomNumber |
| 25.3.3.5 | IsInitialized |
| 25.3.3.6 | ListIndexOf |
| 25.3.3.7 | ListIndexOfAny |
| 25.3.3.8 | ListReverse |
| 25.3.3.9 | ListSort |
| 25.3.3.10 | Max |
| 25.3.3.11 | Min |
| 25.3.3.12 | StringFormat |
| 26 | OTX VehicleInfo extension |
| 26.1 | General |
| 26.2 | Datatypes |
| 26.2.1 | Datatypes overview |
| 26.2.2 | Datatypes syntax |
| 26.2.3 | Datatypes semantics |
| 26.2.3.1 | GatewayMode |
| 26.3 | Enumerations |
| 26.3.1 | Enumerations syntax |
| 26.3.2 | Enumerations semantics |
| 26.3.2.1 | GatewayModes |
| 26.4 | Exceptions |
| 26.4.1 | Exceptions overview |
| 26.4.2 | Exceptions syntax |
| 26.4.3 | Exceptions semantics |
| 26.4.3.1 | General |
| 26.4.3.2 | GatewayException |

| | |
|-----------|--|
| 26.4.3.3 | VehicleInfoException |
| 26.5 | Variable access |
| 26.5.1 | Variable-access overview |
| 26.5.2 | Variable-access syntax |
| 26.5.3 | Variable-access semantics |
| 26.6 | Terms |
| 26.6.1 | Terms overview |
| 26.6.2 | Terms syntax |
| 26.6.3 | Terms general semantics |
| 26.6.3.1 | GatewayModeLiteral |
| 26.6.3.2 | GatewayModeTerm |
| 26.6.3.3 | GatewayModeValue |
| 26.6.3.4 | GetDbComChannelDbComChannelsOfGateways |
| 26.6.3.5 | GetDbComChannelGatewayMode |
| 26.6.3.6 | IsDbComChannelAccessedViaGateway |
| 27 | OTX XML extension |
| 27.1 | General |
| 27.2 | Datatypes |
| 27.2.1 | Datatypes overview |
| 27.2.2 | Datatypes syntax |
| 27.2.3 | Datatypes semantics |
| 27.2.3.1 | XmlDocument |
| 27.2.3.2 | XmlElement |
| 27.3 | Exceptions |
| 27.3.1 | Exceptions overview |
| 27.3.2 | Exceptions syntax |
| 27.3.3 | Exceptions semantics |
| 27.3.3.1 | General |
| 27.3.3.2 | XmlChangeException |
| 27.3.3.3 | XmlException |
| 27.3.3.4 | XmlFormatException |
| 27.3.3.5 | XPathException |
| 27.4 | Variable access |
| 27.4.1 | Variable-access overview |
| 27.4.2 | Variable-access syntax |
| 27.4.3 | Variable-access semantics |
| 27.5 | Actions |
| 27.5.1 | Actions overview |
| 27.5.2 | Actions syntax |
| 27.5.3 | Actions general semantics |
| 27.5.3.1 | AddXmlChildElement |
| 27.5.3.2 | DeleteXmlAttribute |
| 27.5.3.3 | DeleteXmlChildElement |
| 27.5.3.4 | SetXmlComment |
| 27.5.3.5 | SetXmlElementAttribute |
| 27.5.3.6 | SetXmlElementAttributes |
| 27.5.3.7 | SetXmlElementText |
| 27.5.3.8 | SetXmlProcessingInstructions |
| 27.5.3.9 | ValidateXml |
| 27.5.3.10 | XmlSaveToFile |
| 27.6 | Terms |
| 27.6.1 | Terms overview |
| 27.6.2 | Terms syntax |
| 27.6.3 | Terms general semantics |
| 27.6.3.1 | CopyXmlElement |
| 27.6.3.2 | CreateXmlDocument |
| 27.6.3.3 | CreateXmlElement |
| 27.6.3.4 | GetXmlElementAttributes |
| 27.6.3.5 | GetXmlElementChildElements |
| 27.6.3.6 | GetXmlElementName |
| 27.6.3.7 | GetXmlElementsByXPath |
| 27.6.3.8 | GetXmlElementText |
| 27.6.3.9 | GetXmlRootElement |

- 27.6.3.10 XmlDocumentTerm
- 27.6.3.11 XmlDocumentValue
- 27.6.3.12 XmlElementTerm
- 27.6.3.13 XmlElementValue
- 27.6.3.14 XmlFromByteField
- 27.6.3.15 XmlLoadFromFile
- 27.6.3.16 XmlToByteField

28 OTX ZipHandling extension

- 28.1 General
- 28.2 Exceptions
 - 28.2.1 Exceptions overview
 - 28.2.2 Exceptions syntax
 - 28.2.3 Exceptions semantics
 - 28.2.3.1 General
 - 28.2.3.2 FileAlreadyExistsException
 - 28.2.3.3 FileNotFoundException
 - 28.2.3.4 ZipFormatException
 - 28.2.3.5 ZipHandlingException
- 28.3 Actions
 - 28.3.1 Actions overview
 - 28.3.2 Actions syntax
 - 28.3.3 Actions general semantics
 - 28.3.3.1 UnZipFile
 - 28.3.3.2 ZipFile

Annex A (normative) Comprehensive checker rule listing

- A.1 Overview
- A.2 Listing
 - A.2.1 Checker rules for BusMonitoring extension
 - A.2.1.1 BusMonitoring_Chk001 – correct element types for addresses list in StartBusMonitoring
 - A.2.2 Checker rules for CommonDialogs extension
 - A.2.2.1 CommonDialogs_Chk001 – Type-safe FileOpenDialog
 - A.2.3 Checker rules for DataType extension
 - A.2.3.1 DataType_Chk001 – Accessing structure elements
 - A.2.3.2 DataType_Chk002 – Correct target for Enumeration
 - A.2.3.3 DataType_Chk003 – No Circular type definitions of Structures
 - A.2.3.4 DataType_Chk004 – No mixture of implicit and explicit enumeration values
 - A.2.4 Checker rules for DiagComPlus extension
 - A.2.4.1 DiagComPlus_Chk001 – correct element types for responses map
 - A.2.5 Checker rules for ExternalServiceProvider extension
 - A.2.5.1 ExternalServiceProvider_Chk001 – Correct target for service provider
 - A.2.5.2 ExternalServiceProvider_Chk002 – Correct CreateProvider constructor arguments
 - A.2.5.3 ExternalServiceProvider_Chk003 – Input argument omission
 - A.2.5.4 ExternalServiceProvider_Chk004 – Correct CreateProvider constructor reference
 - A.2.5.5 ExternalServiceProvider_Chk005 – Correct ExecuteService service reference
 - A.2.5.6 ExternalServiceProvider_Chk006 – Correct ExecuteService arguments
 - A.2.5.7 ExternalServiceProvider_Chk007 – Correct property attribute reference
 - A.2.5.8 ExternalServiceProvider_Chk008 – Correct Property access
 - A.2.5.9 ExternalServiceProvider_Chk009 – Correct event attribute reference
 - A.2.5.10 ExternalServiceProvider_Chk010 – Correct CreateProvider constructor attribute
 - A.2.5.11 ExternalServiceProvider_Chk011 – Correct Event values
 - A.2.6 Checker rules for File extension
 - A.2.6.1 File_Chk001 – No lazy evaluation on terms with side effects
 - A.2.7 Checker rules for Persistence extension
 - A.2.7.1 Persistence_Chk001 – Persistable data types
 - A.2.7.2 Persistence_Chk002 – No Path in persisted value
 - A.2.8 Checker rules for SQL extension
 - A.2.8.1 SQL_Chk001 – Right column data type
 - A.2.8.2 SQL_Chk002 – No lazy evaluation on terms with side effects
 - A.2.9 Checker rules for StateMachine extension
 - A.2.9.1 StateMachineProcedure_Chk001 – No procedure realisation
 - A.2.9.2 StateMachineProcedure_Chk002 – Mandatory target state
 - A.2.9.3 StateMachineProcedure_Chk003 – No target state for completed state

- A.2.9.4 StateMachineProcedure_Chk004 – Mandatory trigger
- A.2.9.5 StateMachineProcedure_Chk005 – Mandatory transition
- A.2.9.6 StateMachineProcedure_Chk006 – Initial and completed state shall be distinguished
- A.2.9.7 StateMachineProcedure_Chk007 – Correct nesting of initial state
- A.2.9.8 StateMachineProcedure_Chk008 – Correct nesting of completed state
- A.2.9.9 StateMachineProcedure_Chk009 – Correct nesting of transition target state
- A.2.9.10 StateMachineProcedure_Chk010 – Correct nesting of transition trigger references
- A.2.9.11 StateMachineProcedure_Chk011 – unreachable states
- A.2.10 Checker rules for StateVariable extension
- A.2.10.1 StateVariable_Chk001 – Write-only state variables
- A.2.11 Checker rules for TestResultHandling extension
- A.2.11.1 TestResultHandling_Chk001 – type safe list comparison
- A.2.11.2 TestResultHandling_Chk002 – correct list type for DTC's list
- A.2.11.3 TestResultHandling_Chk003 – correct element types for properties map
- A.2.11.4 TestResultHandling_Chk004 – correct list type for SetListTestResult
- A.2.11.5 TestResultHandling_Chk005 – correct map type for SetMapTestResult
- A.2.11.6 TestResultHandling_Chk006 – limit definition for SetToleranceTestResult
- A.2.12 Checker rules for util extension
- A.2.12.1 Util_Chk001 – For the ListSort term the item type of the list shall be of SimpleType
- A.2.13 Checker rules for XML extension
- A.2.13.1 Xml_Chk001 – type-safe SetXmlElementAttributes
- A.2.13.2 Xml_Chk002 – type-safe CreateXmlElement
- A.2.14 Checker rules for ZipFiles extension
- A.2.14.1 ZipFiles_Chk001 – type-safe UnZipFile
- A.2.14.2 ZipFiles_Chk002 – type-safe ZipFile

Annex B (normative) PTX file

- B.1 General
- B.2 Security
 - B.2.1 Overview
 - B.2.2 Requirements
 - B.2.3 Solution
 - B.2.4 Signing PTX for transport
 - B.2.4.1 Overview
 - B.2.4.2 Process
 - B.2.4.3 Pseudocode
 - B.2.5 Verifying PTX against manipulation
 - B.2.5.1 Overview
 - B.2.5.2 Process
 - B.2.5.3 Pseudocode
 - B.2.6 Preparing the PTX content digest
 - B.2.6.1 Overview
 - B.2.6.2 Process
 - B.2.6.3 Pseudocode

Page count: 379