

# DIN EN 15423:2008-09 (E)

## Ventilation for buildings - Fire precautions for air distribution systems in buildings

---

<b>Contents</b>		<b>Page</b>
Foreword .....		3
<b>1</b>	<b>Scope .....</b>	<b>4</b>
<b>2</b>	<b>Normative references .....</b>	<b>5</b>
<b>3</b>	<b>Terms and definitions .....</b>	<b>6</b>
<b>4</b>	<b>Air distribution system .....</b>	<b>7</b>
<b>4.1</b>	<b>General requirements .....</b>	<b>7</b>
<b>4.2</b>	<b>Design of air distribution systems .....</b>	<b>7</b>
<b>4.3</b>	<b>Installation .....</b>	<b>7</b>
<b>5</b>	<b>Requirements for components intended for fire precautions .....</b>	<b>7</b>
<b>5.1</b>	<b>General .....</b>	<b>7</b>
<b>5.2</b>	<b>Inlet/outlet louvres .....</b>	<b>8</b>
<b>5.3</b>	<b>Fans .....</b>	<b>8</b>
<b>5.4</b>	<b>Air control dampers .....</b>	<b>10</b>
<b>5.5</b>	<b>Duct .....</b>	<b>11</b>
<b>5.6</b>	<b>Fire dampers and smoke control dampers .....</b>	<b>11</b>
<b>5.7</b>	<b>Air terminal devices .....</b>	<b>12</b>
<b>5.8</b>	<b>Anchors and supports .....</b>	<b>13</b>
<b>5.9</b>	<b>Duct fittings .....</b>	<b>13</b>
<b>5.10</b>	<b>Control panels .....</b>	<b>13</b>
<b>5.11</b>	<b>Cables and connections .....</b>	<b>14</b>
<b>5.12</b>	<b>Air handling units .....</b>	<b>14</b>
<b>5.13</b>	<b>Air filters .....</b>	<b>15</b>
<b>5.14</b>	<b>Sound attenuators .....</b>	<b>16</b>
<b>5.15</b>	<b>Heat exchangers .....</b>	<b>16</b>
<b>6</b>	<b>Commissioning and maintenance of air distribution systems .....</b>	<b>16</b>
<b>7</b>	<b>Marking, labelling and product information .....</b>	<b>17</b>
<b>Bibliography .....</b>		<b>24</b>
<b>Annex A (informative) Checklist for components .....</b>		<b>18</b>
<b>Annex B (informative) Table of components/characteristics European Standards .....</b>		<b>20</b>
<b>Annex C (informative) Maintenance for fire dampers and smoke control dampers .....</b>		<b>22</b>