

# DIN EN 1949:2011-11 (E)

## Specification for the installation of LPG systems for habitation purposes in leisure accommodation vehicles and accommodation purposes in other vehicles

---

<b>Contents</b>		<b>Page</b>
Foreword .....		4
<b>1</b>	<b>Scope .....</b>	<b>5</b>
<b>2</b>	<b>Normative references .....</b>	<b>5</b>
<b>3</b>	<b>Terms and definitions .....</b>	<b>6</b>
<b>4</b>	<b>General requirements .....</b>	<b>9</b>
4.1	General .....	9
4.2	Dynamic loads .....	9
4.3	Tightness .....	10
4.3.1	Requirements .....	10
4.3.2	Test .....	10
4.4	Second LPG supply .....	10
<b>5</b>	<b>Cylinder compartments .....</b>	<b>10</b>
5.1	General .....	10
5.2	Cylinder compartments with internal access .....	12
5.3	Cylinders secured outside the vehicle .....	12
5.4	Requirements for the construction of cylinder compartments .....	13
5.5	Ventilation for cylinder compartments .....	13
5.6	Cylinder compartments with internal access and low capacity cylinders .....	13
5.7	Electric equipment in cylinder compartments .....	14
<b>6</b>	<b>Pressure regulation systems and working pressures .....</b>	<b>14</b>
6.1	Pressure regulation systems .....	14
6.2	Marking of the working pressure .....	16
6.3	Devices to protect against over-pressure .....	16
6.4	Connection of pressure regulators to rigid pipework - Low pressure supply .....	16
6.5	Connection of a dual cylinder system .....	16
6.6	Connection of an external LPG supply by means of a plug-in connector .....	16
<b>7</b>	<b>Components .....</b>	<b>18</b>
7.1	Hoses/Hose assemblies .....	18
7.2	Pipes .....	18
7.3	Pipe fittings .....	19
7.4	Jointing materials .....	21
7.5	Shut-off valves .....	21
7.6	Manual change over valve .....	21
<b>8</b>	<b>Installation design .....</b>	<b>21</b>
8.1	General .....	21
8.2	Protection against mechanical damage .....	22
8.3	Avoidance of corrosion .....	22
8.4	Pipe sizing .....	22
8.5	Pipe fittings .....	22
8.6	Positioning of LPG pipes near to other services .....	22
8.7	Fixing .....	22
8.8	Shut-off valves .....	22
8.9	Equipotential bonding of LPG pipes .....	23

<b>9</b>	<b>Connection of appliances to the LPG supply installation .....</b>	<b>23</b>
<b>10</b>	<b>Appliances .....</b>	<b>24</b>
<b>10.1</b>	<b>Suitability of appliances .....</b>	<b>24</b>
<b>10.2</b>	<b>Installations .....</b>	<b>24</b>
<b>10.3</b>	<b>Space heaters .....</b>	<b>24</b>
<b>10.3.1</b>	<b>Space heating appliances in caravans, motor caravans and other road vehicles .....</b>	<b>24</b>
<b>10.3.2</b>	<b>Space heating appliances in caravan holiday homes .....</b>	<b>24</b>
<b>10.4</b>	<b>Water heaters .....</b>	<b>25</b>
<b>10.4.1</b>	<b>Water heaters in caravans, motor caravans and other road vehicles .....</b>	<b>25</b>
<b>10.4.2</b>	<b>Water heaters in caravan holiday homes .....</b>	<b>25</b>
<b>10.5</b>	<b>Cooking appliances .....</b>	<b>26</b>
<b>10.6</b>	<b>Refrigerators .....</b>	<b>26</b>
<b>10.7</b>	<b>Gas lights .....</b>	<b>26</b>
<b>10.8</b>	<b>LPG fuel cells .....</b>	<b>26</b>
<b>10.9</b>	<b>LPG power generators .....</b>	<b>26</b>
<b>11</b>	<b>Flueing .....</b>	<b>27</b>
<b>11.1</b>	<b>Flues .....</b>	<b>27</b>
<b>11.2</b>	<b>Flue terminals .....</b>	<b>27</b>
<b>11.3</b>	<b>Weather protection .....</b>	<b>29</b>
<b>11.4</b>	<b>Draught diverters .....</b>	<b>29</b>
<b>11.5</b>	<b>Accessibility of flues .....</b>	<b>29</b>
<b>12</b>	<b>Installation of LPG tanks supplying LPG appliances .....</b>	<b>29</b>
<b>12.1</b>	<b>Requirements regarding the LPG tank and accessories .....</b>	<b>29</b>
<b>12.2</b>	<b>Installation of the LPG tank and system requirements .....</b>	<b>30</b>
<b>13</b>	<b>User's handbook .....</b>	<b>31</b>
	<b>Annex A (informative) National situations in the Member States .....</b>	<b>33</b>
	<b>Annex B (informative) Countries where underfloor flue is not permitted .....</b>	<b>34</b>
	<b>Annex C (informative) Manufacturer declaration .....</b>	<b>35</b>
	<b>Bibliography .....</b>	<b>37</b>