

# ISO 6016:2008-12 (E)

## Earth-moving machinery - Methods of measuring the masses of whole machines, their equipment and components

---

<b>Contents</b>		<b>Page</b>
<b>Foreword</b> .....		<b>iv</b>
<b>1</b>	<b>Scope</b> .....	<b>1</b>
<b>2</b>	<b>Normative references</b> .....	<b>1</b>
<b>3</b>	<b>Terms and definitions</b> .....	<b>1</b>
<b>3.1</b>	<b>General definitions</b> .....	<b>1</b>
<b>3.2</b>	<b>Masses</b> .....	<b>3</b>
<b>3.3</b>	<b>Measurements</b> .....	<b>4</b>
<b>3.4</b>	<b>Apparatus</b> .....	<b>4</b>
<b>4</b>	<b>Preparation for testing</b> .....	<b>4</b>
<b>5</b>	<b>Methods for measuring mass</b> .....	<b>5</b>
<b>5.1</b>	<b>General</b> .....	<b>5</b>
<b>5.2</b>	<b>Precision of measurement apparatus</b> .....	<b>5</b>
<b>5.3</b>	<b>Single measurement method</b> .....	<b>5</b>
<b>5.4</b>	<b>Cumulative measurement method</b> .....	<b>7</b>
<b>5.5</b>	<b>Measurement of axle load</b> .....	<b>8</b>
<b>5.6</b>	<b>Determination of mass of equipment, attachment or components</b> .....	<b>8</b>
<b>6</b>	<b>Reporting measurement results</b> .....	<b>8</b>