

# ISO 4309:2010-08 (E)

## Cranes - Wire ropes - Care and maintenance, inspection and discard

---

<b>Contents</b>	<b>Page</b>
Foreword .....	iv
Introduction .....	v
1 Scope .....	1
2 Normative references .....	2
3 Terms and definitions .....	2
4 Care and maintenance .....	3
4.1 General .....	3
4.2 Rope replacement .....	3
4.3 Offloading and storing the rope .....	5
4.4 Condition of the rope prior to installation .....	5
4.5 Installing the rope .....	5
4.6 Running-in the new rope .....	8
4.7 Maintaining the rope .....	9
4.8 Maintenance of rope-related parts of the crane .....	9
5 Inspection .....	10
5.1 General .....	10
5.2 Daily visual inspection .....	10
5.3 Periodic inspection .....	10
5.4 Inspection following an incident .....	13
5.5 Inspection following period with crane out of operation .....	13
5.6 Non-destructive testing .....	13
6 Discard criteria .....	14
6.1 General .....	14
6.2 Visible broken wires .....	14
6.3 Decrease in rope diameter .....	17
6.4 Fracture of strands .....	19
6.5 Corrosion .....	19
6.6 Deformation and damage .....	20
Annex A (informative) Key areas requiring particular close inspection .....	23
Annex B (informative) Typical modes of deterioration .....	25
Annex C (informative) Internal examination of rope .....	34
Annex D (informative) Typical examples of inspection record .....	37
Annex E (informative) Useful information on rope deterioration and discard criteria .....	39
Annex F (informative) Combined effect assessment of rope condition and severity rating -- One method .....	42
Annex G (informative) Examples of cross-sections of ropes and corresponding rope category number (RCN) .....	45
Annex H (informative) Guidance on assessment and rating of external corrosion .....	51
Bibliography .....	53