

# DIN EN 13001-2:2012-06 (E)

## Crane safety - General design - Part 2: Load actions (includes Corrigendum AC:2012)

<b>Contents</b>		<b>Page</b>
Foreword .....		4
Introduction .....		5
<b>1</b>	<b>Scope .....</b>	<b>6</b>
<b>2</b>	<b>Normative references .....</b>	<b>6</b>
<b>3</b>	<b>Terms, definitions, symbols and abbreviations .....</b>	<b>6</b>
<b>3.1</b>	<b>Terms and definitions .....</b>	<b>6</b>
<b>3.2</b>	<b>Symbols and abbreviations .....</b>	<b>6</b>
<b>4</b>	<b>Safety requirements and/or measures .....</b>	<b>11</b>
<b>4.1</b>	<b>General .....</b>	<b>11</b>
<b>4.2</b>	<b>Loads .....</b>	<b>11</b>
<b>4.2.1</b>	<b>General .....</b>	<b>11</b>
<b>4.2.2</b>	<b>Regular loads .....</b>	<b>12</b>
<b>4.2.3</b>	<b>Occasional loads .....</b>	<b>18</b>
<b>4.2.4</b>	<b>Exceptional loads .....</b>	<b>25</b>
<b>4.3</b>	<b>Load combinations .....</b>	<b>31</b>
<b>4.3.1</b>	<b>General .....</b>	<b>31</b>
<b>4.3.2</b>	<b>High risk applications .....</b>	<b>32</b>
<b>4.3.3</b>	<b>Mass distribution classes MDC1 and MDC2 .....</b>	<b>32</b>
<b>4.3.4</b>	<b>Partial safety factors for the mass of the crane .....</b>	<b>33</b>
<b>4.3.5</b>	<b>Partial safety factors to be applied to loads caused by displacements .....</b>	<b>33</b>
<b>4.3.6</b>	<b>Survey of load combinations .....</b>	<b>34</b>
<b>4.3.7</b>	<b>Partial safety factors for the proof of rigid body stability .....</b>	<b>38</b>
	<b>Annex A (normative) Aerodynamic coefficients .....</b>	<b>41</b>
<b>A.1</b>	<b>General .....</b>	<b>41</b>
<b>A.2</b>	<b>Individual members .....</b>	<b>44</b>
<b>A.3</b>	<b>Plane and spatial lattice structure members .....</b>	<b>49</b>
<b>A.4</b>	<b>Structural members in multiple arrangement .....</b>	<b>52</b>
	<b>Annex B (informative) Illustration of the types of hoist drives .....</b>	<b>54</b>
	<b>Annex C (informative) Selection of a suitable set of crane standards for a given application .....</b>	<b>58</b>
	<b>Annex ZA (informative) Relationship between this European Standard and the Essential Requirements of EU Directive 2006/42/EC .....</b>	<b>59</b>
	<b>Bibliography .....</b>	<b>60</b>
	<b>Tables Table 1 -- Symbols and abbreviations .....</b>	<b>7</b>
	<b>Table 2 -- Values of <math>\alpha</math> and <math>\alpha_{min}</math> .....</b>	<b>13</b>
	<b>Table 3 -- Values of <math>v_h</math> for estimation of <math>\alpha</math> .....</b>	<b>14</b>
	<b>Table 4 -- In-service wind states .....</b>	<b>20</b>

Table 5 -- Values of $1i$ , $2i$ , $1i$ and $2i$ .....	24
Table 6 -- Reference storm wind velocities $v_{ref}$ in dependence on regions in Europe as shown in Figure 12 .....	28
Table 7 -- Values of factor $p$ .....	33
Table 8 -- Values of the partial safety factor $p$ to be applied to loads due to intended displacements .....	33
Table 9 -- Values of the partial safety factor $p$ to be applied to loads due to unintended displacements .....	34
Table 10 -- Loads, load combinations and partial safety factors .....	35
Table 11 -- Partial safety factors for the proof of rigid body stability .....	39
Table A.1 -- Relative aerodynamic length $r$ .....	43
Table A.2 -- Aerodynamic coefficients $c_o$ for individual members of circular sections .....	45
Table A.3 -- Aerodynamic coefficients $c_{oy}$ , $c_{oz}$ for individual flat sided structural members .....	46
Table A.4 -- Aerodynamic coefficients $c_o$ for individual structural members of triangular and rectangular hollow sections .....	48
Table A.5 -- Characteristic areas $A$ and aerodynamic coefficients $c_o$ for plane and spatial lattice structure members .....	49
Table A.6 -- Characteristic areas $A$ and aerodynamic coefficients $c_o$ of structural members in multiple arrangement .....	52
Table B.1 -- Hoist drive types .....	54