

# ISO 13031:2016-05 (E)

## Earth-moving machinery - Quick couplers - Safety

---

<b>Contents</b>		<b>Page</b>
Foreword .....		iv
Introduction .....		v
<b>1</b>	<b>Scope .....</b>	<b>1</b>
<b>2</b>	<b>Normative references .....</b>	<b>1</b>
<b>3</b>	<b>Terms and definitions .....</b>	<b>1</b>
<b>4</b>	<b>Safety requirements and protective measures .....</b>	<b>5</b>
<b>4.1</b>	<b>Quick coupler .....</b>	<b>5</b>
<b>4.1.1</b>	<b>General .....</b>	<b>5</b>
<b>4.1.2</b>	<b>Engagement system .....</b>	<b>6</b>
<b>4.1.3</b>	<b>Locking system .....</b>	<b>6</b>
<b>4.2</b>	<b>Object handling .....</b>	<b>7</b>
<b>4.3</b>	<b>Controls .....</b>	<b>7</b>
<b>4.3.1</b>	<b>General requirements .....</b>	<b>7</b>
<b>4.3.2</b>	<b>Separate control .....</b>	<b>7</b>
<b>4.3.3</b>	<b>Integrated controls .....</b>	<b>8</b>
<b>4.4</b>	<b>Electrical circuits .....</b>	<b>10</b>
<b>4.4.1</b>	<b>Over-current protective devices .....</b>	<b>10</b>
<b>4.5</b>	<b>Pressurized systems .....</b>	<b>10</b>
<b>5</b>	<b>Information for use .....</b>	<b>10</b>
<b>5.1</b>	<b>Safety labels .....</b>	<b>10</b>
<b>5.2</b>	<b>Instructions and information for use .....</b>	<b>10</b>
<b>5.2.1</b>	<b>Operator's manual .....</b>	<b>10</b>
<b>5.2.2</b>	<b>Installation manual .....</b>	<b>11</b>
<b>5.3</b>	<b>Quick coupler marking .....</b>	<b>11</b>
Bibliography .....		12