

ISO 23725:2024-08 (E)

Autonomous system and fleet management system inter operability

Contents		Page
Foreword		vi
Introduction		vii
1	Scope	1
2	Normative references	1
3	Terms, definitions and abbreviations	1
3.1	Terms and definitions	2
3.2	Abbreviations	2
4	Computer communication	3
4.1	Session and transport layer	3
4.1.1	WebSocket client and service behaviour	4
4.2	Presentation layer	4
4.2.1	Container, serialization, and encoding	4
4.2.2	JSON container	4
4.2.3	NULL attribute	4
4.2.4	Units	4
4.2.5	On machine component arrays	5
5	Messaging	6
5.1	Overview	6
5.2	Event based messaging	6
5.3	Message header	7
5.3.1	General	7
5.3.2	Header example	7
5.4	Messages during connection outage	8
5.5	Out of standard message	8
5.5.1	General	8
5.5.2	Out of standard examples	8
5.6	Common attribute enumeration	9
5.6.1	General	9
5.6.2	Actor	9
5.6.3	Action request	9
5.6.4	Action response	10
5.6.5	Action status	10
5.6.6	Autonomy mode	10
6	System messaging	10
6.1	General	10
6.2	Fleet definition message	10
6.2.1	General	10
6.2.2	Fleet ID	12
6.2.3	Equipment type	12
6.2.4	Autonomous	13
6.2.5	Equipment length and width	13
6.2.6	Fleet definition example	13
6.3	Machine all-stop	15
6.3.1	Optional feature	15
6.3.2	Scope of effect	15

6.3.3	Machine all-stop status message	15
6.3.4	Machine all-stop request message	16
6.3.5	Machine all-stop response message	17
6.3.6	Machine all-stop examples	18
7	Generic machine telemetry	20
7.1	Message content	20
7.2	Data streams	20
7.3	Machine position	20
7.3.1	Machine coordinate system and frame of reference	20
7.4	Machine position message	21
7.4.1	Machine position examples	23
7.5	Basic machine health message	25
7.5.1	Basic machine health message example	27
8	Generic machine messaging	27
8.1	Message content	27
8.2	Machine autonomy mode message	27
8.3	Machine dispatch availability	28
8.3.1	General	28
8.3.2	Purpose	29
8.3.3	Machine Dispatch Availability message	29
8.3.4	Trigger the FMS to re-send an assignment	29
8.3.5	Impending custodian change	30
8.3.6	Machine dispatch availability example	30
8.4	Machine diagnostic message	32
8.4.1	General	32
8.4.2	Purpose	32
8.4.3	Component identification number	32
8.4.4	Fault Code number	33
8.4.5	AHS documentation	33
8.4.6	Connection time	33
8.4.7	When the last fault clears	33
8.4.8	Machine diagnostic message examples	34
9	Routing	35
9.1	Map connectivity	36
9.1.1	Purpose	36
9.1.2	Map Connectivity message	36
9.1.3	Clarification of unidirectionality of connections	37
9.1.4	Understanding the specification by example	37
10	Map service	44
10.1	Map object concepts	44
10.2	Map object identification number rules and restrictions	44
10.2.1	Restrictions on object identification numbers	44
10.2.2	Identification numbers rules for ways and nodes	45
10.3	Map format	45
10.3.1	Map document encoding	45
10.3.2	Splitting a large map into chunks	46
10.3.3	Point - node element	46
10.3.4	Line - way element	47
10.3.5	Road	48
10.3.6	Lane	48
10.3.7	Area	49
10.4	Adding context to objects	51
10.4.1	Tag Element Attribute Encoding	51
10.4.2	Standard tags	52
10.4.3	Tag with Attribute k = 'name'	52
10.4.4	Tag with Attribute k = 'default task'	53
10.4.5	Tag with Attribute k = 'autonomy'	53

10.4.6	Tag with Attribute k = 'autonomy:area'	54
10.4.7	Tag with Attribute k = 'oneway'	54
10.5	Map building	55
10.5.1	Connecting map objects	55
10.5.2	Building a purely structured road model	55
10.5.3	Purely structured rules	55
10.6	Map service messaging	56
10.6.1	Map service identification	56
10.6.2	Map Service Identification V1	56
10.6.3	Map summary	56
10.6.4	Map command - get summary	58
10.6.5	Map command - get all	59
10.6.6	Map document message	59
11	Interface diagnostic	60
11.1	Interface diagnostic information	60
11.1.1	Diagnostic measurement information	60
11.1.2	Diagnostic message information	61
12	Haul truck production	63
12.1	Message content	63
12.2	Production cycle message	63
12.3	Production cycle definition	63
12.3.1	Definition of a haul truck cycle	64
12.3.2	Proposed state decision tree	64
12.4	Haul truck production state message	65
12.4.1	Haul truck production state V2	66
12.5	Haul truck production state sensor V1	66
12.5.1	Haul truck production state sensor V1	67
12.6	Haul truck payload message	68
12.7	Operational context	69
12.8	Haul truck dump message	69
13	Haul truck assignment	70
13.1	Message content	70
13.2	Haul truck task assignment types	71
13.3	Haul truck assignment message	71
13.3.1	Precondition and behaviour	71
13.3.2	Current assignment	71
13.3.3	Future assignment	71
13.3.4	Responsibility of safe execution	71
13.3.5	Haul truck assignment request message	71
13.3.6	Haul truck assignment response message	73
13.3.7	Haul truck assignment rejection	75
13.3.8	Haul truck assignment reset message	76
13.3.9	Haul truck assignment message	77
	Annex A (informative) Example of message exchange	79
	Annex B (informative) External IT infrastructure	86
	Bibliography	87