

# ISO 10300-1:2001-08 (E)

## Calculation of load capacity of bevel gears - Part 1: Introduction and general influence factors

---

Contents	Page
<b>Foreword .....</b>	<b>iv</b>
<b>Introduction .....</b>	<b>v</b>
<b>1 Scope .....</b>	<b>1</b>
<b>2 Normative references .....</b>	<b>1</b>
<b>3 Terms and definitions .....</b>	<b>2</b>
<b>4 Symbols and abbreviations .....</b>	<b>2</b>
<b>5 Application .....</b>	<b>10</b>
<b>6 External force and application factor, KA .....</b>	<b>13</b>
<b>7 Dynamic factor, Kv .....</b>	<b>15</b>
<b>8 Face load factors, KH&gt;, KF&gt; .....</b>	<b>25</b>
<b>9 Transverse load factors, KH=, KF= .....</b>	<b>27</b>
<b>Annex A (normative) Calculation of bevel gear geometry .....</b>	<b>34</b>
<b>Annex B (informative) Values for application factor, KA .....</b>	<b>45</b>
<b>Annex C (informative) Contact patterns .....</b>	<b>46</b>