

# ISO 12510:2004-03 (E)

## Earth-moving machinery - Operation and maintenance - Maintainability guidelines

---

<b>Contents</b>		<b>Page</b>
Foreword .....		iv
1	Scope .....	1
2	Normative references .....	1
3	Terms and definitions .....	1
4	General .....	1
5	Location of items .....	2
6	Access system .....	3
7	Access apertures .....	3
8	Covers .....	4
9	Tools .....	4
10	Service instrumentation .....	4
11	Labelling .....	4
12	Accompanying documentation .....	5
Annex A (informative) Matrixes of maintainability .....		7
Bibliography .....		11