

ISO 12510:2004-03 (E)

Earth-moving machinery - Operation and maintenance - Maintainability guidelines

Contents		Page
Foreword		iv
1	Scope	1
2	Normative references	1
3	Terms and definitions	1
4	General	1
5	Location of items	2
6	Access system	3
7	Access apertures	3
8	Covers	4
9	Tools	4
10	Service instrumentation	4
11	Labelling	4
12	Accompanying documentation	5
Annex A (informative) Matrixes of maintainability		7
Bibliography		11