

ISO 6336-2:2006-09 (E)

Calculation of load capacity of spur and helical gears - Part 2: Calculation of surface durability (pitting)

| Contents | | Page |
|-----------------------|--|-------------|
| Foreword | | iv |
| Introduction | | v |
| 1 | Scope | 1 |
| 2 | Normative references | 1 |
| 3 | Terms, definitions, symbols and abbreviated terms | 2 |
| 4 | Pitting damage and safety factors | 2 |
| 5 | Basic formulæ | 3 |
| 5.1 | General | 3 |
| 5.2 | Safety factor for surface durability (against pitting), SH | 3 |
| 5.3 | Contact stress, H | 3 |
| 5.4 | Permissible contact stress, HP | 5 |
| 6 | Zone factor, ZH, and single pair tooth contact factors, ZB and ZD | 9 |
| 6.1 | Zone factor, ZH | 9 |
| 6.2 | Single pair tooth contact factors, ZB and ZD, for $u \leq 2$ | 10 |
| 6.3 | Single pair tooth contact factors, ZB and ZD, for $u > 2$ | 11 |
| 7 | Elasticity factor, ZE | 11 |
| 8 | Contact ratio factor, Z | 12 |
| 8.1 | Determination of contact ratio factor, Z | 13 |
| 8.2 | Calculation of transverse contact ratio, ϵ_α , and overlap ratio, ϵ_β | 14 |
| 9 | Helix angle factor, Z β | 15 |
| 10 | Strength for contact stress | 16 |
| 10.1 | Allowable stress numbers (contact), H lim, for Method B | 16 |
| 10.2 | Allowable stress number values for Method BR | 16 |
| 11 | Life factor, ZNT (for flanks) | 16 |
| 11.1 | Life factor ZNT: Method A | 17 |
| 11.2 | Life factor ZNT: Method B | 17 |
| 12 | Influence of lubricant film, factors ZL, Z v and ZR | 18 |
| 12.1 | General | 18 |
| 12.2 | Influence of lubricant film: Method A | 19 |
| 12.3 | Influence of lubricant film, factors ZL, Z v and ZR: Method B | 19 |
| 13 | Work hardening factor, ZW | 24 |
| 13.1 | Work hardening factor, ZW: Method A | 24 |
| 13.2 | Work hardening factor, ZW: Method B | 25 |
| 14 | Size factor, ZX | 29 |
| Annex A (informative) | Start of involute | 30 |
| Bibliography | | 33 |