

# DIN ISO 11088:2023-08 (E)

## Alpine ski/binding/boot (S-B-B) system - Assembly, adjustment and inspection (ISO 11088:2023)

---

<b>Contents</b>		<b>Page</b>
National foreword.....		3
National Annex NA (informative) <b>Bibliography</b> .....		4
Foreword.....		5
Introduction.....		6
<b>1</b>	<b>Scope</b> .....	<b>7</b>
<b>2</b>	<b>Normative references</b> .....	<b>7</b>
<b>3</b>	<b>Terms and definitions</b> .....	<b>7</b>
<b>4</b>	<b>Principle</b> .....	<b>9</b>
<b>5</b>	<b>Skier's parameters</b> .....	<b>9</b>
	5.1 General.....	9
	5.2 Weight method.....	9
<b>6</b>	<b>Equipment parameters</b> .....	<b>9</b>
	6.1 Choice of new equipment.....	9
	6.2 Visual inspection and preparation of used equipment.....	10
	6.3 Assembly.....	10
	6.4 Compatibility and binding-to-boot fitting adjustments.....	10
	6.5 Initial indicator adjustment.....	11
	6.6 Functional check (inspection of functions).....	11
	6.7 Measurement of release value.....	11
	6.8 Report.....	12
<b>Annex A (normative) Skier type</b> .....		<b>13</b>
<b>Annex B (normative) Method of setting</b> .....		<b>15</b>
<b>Annex C (normative) Flowchart</b> .....		<b>17</b>
<b>Annex D (normative) Clean versus lubricated diagnostic test for boot/binding compatibility</b> .....		<b>18</b>
<b>Annex E (informative) Drill</b> .....		<b>19</b>
<b>Bibliography</b> .....		<b>20</b>