

# DIN EN 14570:2014-07 (E)

## LPG equipment and accessories - Equipping of overground and underground LPG vessels

---

<b>Contents</b>		<b>Page</b>
Foreword .....		4
Introduction .....		5
<b>1</b>	<b>Scope .....</b>	<b>6</b>
<b>2</b>	<b>Normative references .....</b>	<b>6</b>
<b>3</b>	<b>Terms, definitions and abbreviations .....</b>	<b>6</b>
<b>3.1</b>	<b>Terms and definitions .....</b>	<b>6</b>
<b>3.2</b>	<b>Abbreviations .....</b>	<b>9</b>
<b>4</b>	<b>Pressure vessel equipment .....</b>	<b>9</b>
<b>4.1</b>	<b>General .....</b>	<b>9</b>
<b>4.2</b>	<b>Selection of pressure vessel equipment .....</b>	<b>9</b>
<b>4.3</b>	<b>Screwed joints .....</b>	<b>10</b>
<b>4.4</b>	<b>Seals and gaskets .....</b>	<b>10</b>
<b>5</b>	<b>Operational functions .....</b>	<b>10</b>
<b>5.1</b>	<b>General .....</b>	<b>10</b>
<b>5.2</b>	<b>Pressure relief .....</b>	<b>11</b>
<b>5.2.1</b>	<b>General .....</b>	<b>11</b>
<b>5.2.2</b>	<b>Isolating devices and manifolds .....</b>	<b>12</b>
<b>5.2.3</b>	<b>Vent pipes .....</b>	<b>12</b>
<b>5.3</b>	<b>Drainage .....</b>	<b>12</b>
<b>5.4</b>	<b>Liquid removal system .....</b>	<b>12</b>
<b>5.5</b>	<b>Maximum fill indication/control .....</b>	<b>13</b>
<b>5.5.1</b>	<b>General .....</b>	<b>13</b>
<b>5.5.2</b>	<b>Fixed liquid level gauge .....</b>	<b>13</b>
<b>5.5.3</b>	<b>Overfill protection device .....</b>	<b>13</b>
<b>5.6</b>	<b>Filling system .....</b>	<b>13</b>
<b>5.7</b>	<b>Vapour off-take .....</b>	<b>13</b>
<b>5.8</b>	<b>Vapour return .....</b>	<b>13</b>
<b>5.9</b>	<b>Liquid off-take .....</b>	<b>14</b>
<b>5.10</b>	<b>Liquid return .....</b>	<b>14</b>
<b>5.11</b>	<b>Temperature indication .....</b>	<b>14</b>
<b>5.12</b>	<b>Pressure indication .....</b>	<b>14</b>
<b>5.13</b>	<b>Liquid level indication .....</b>	<b>14</b>
<b>5.14</b>	<b>Road tanker potential bonding .....</b>	<b>14</b>
<b>5.15</b>	<b>Earthing .....</b>	<b>15</b>
<b>6</b>	<b>Equipping .....</b>	<b>15</b>
<b>6.1</b>	<b>General .....</b>	<b>15</b>
<b>6.2</b>	<b>Screwed joints .....</b>	<b>15</b>
<b>6.3</b>	<b>Flanged joints .....</b>	<b>15</b>
<b>7</b>	<b>Checking and testing .....</b>	<b>15</b>
<b>7.1</b>	<b>General .....</b>	<b>15</b>
<b>7.2</b>	<b>Leak tightness .....</b>	<b>16</b>
<b>7.3</b>	<b>Excess flow valve .....</b>	<b>16</b>
<b>7.4</b>	<b>Completion and purging .....</b>	<b>16</b>

<b>8</b>	<b>Storage, handling and transportation .....</b>	<b>16</b>
<b>9</b>	<b>Documentation .....</b>	<b>17</b>
	<b>Annex A (informative) Examples of alternative means of over pressure protection for underground/mounded pressure vessels .....</b>	<b>18</b>
	<b>Annex B (normative) Settings and discharge rates for PRVs and hydrostatic relief valves .....</b>	<b>19</b>
<b>B.1</b>	<b>Setting .....</b>	<b>19</b>
<b>B.2</b>	<b>Discharge rates .....</b>	<b>19</b>
<b>B.2.1</b>	<b>General .....</b>	<b>19</b>
<b>B.2.2</b>	<b>Above ground pressure vessels .....</b>	<b>19</b>
<b>B.2.3</b>	<b>Underground/fully mounded pressure vessels .....</b>	<b>19</b>
<b>B.2.4</b>	<b>Semi-mounded pressure vessels .....</b>	<b>20</b>
	<b>Annex ZA (informative) Relationship between this European Standard and the Essential Requirements of EU Directive 97/23/EC .....</b>	<b>21</b>
	<b>Bibliography .....</b>	<b>22</b>