

# DIN EN 15316-4-1:2008-09 (E)

## Heating systems in buildings - Method for calculation of system energy requirements and system efficiencies - Part 4-1: Space heating generation systems, combustion systems (boilers)

---

<b>Contents</b>		<b>Page</b>
Foreword .....		5
Introduction .....		7
<b>1</b>	<b>Scope .....</b>	<b>8</b>
<b>2</b>	<b>Normative references .....</b>	<b>8</b>
<b>3</b>	<b>Terms and definitions .....</b>	<b>9</b>
<b>3.1</b>	<b>Definitions .....</b>	<b>9</b>
<b>3.2</b>	<b>Symbols and units .....</b>	<b>12</b>
<b>4</b>	<b>Principle of the method .....</b>	<b>14</b>
<b>4.1</b>	<b>Heat balance of the generation sub-system, including control of heat generation .....</b>	<b>14</b>
<b>4.1.1</b>	<b>Physical factors taken into account .....</b>	<b>14</b>
<b>4.1.2</b>	<b>Calculation structure (input and output data) .....</b>	<b>14</b>
<b>4.2</b>	<b>Generation sub-system basic energy balance .....</b>	<b>16</b>
<b>4.3</b>	<b>Auxiliary energy .....</b>	<b>17</b>
<b>4.4</b>	<b>Recoverable, recovered and unrecoverable system thermal losses .....</b>	<b>17</b>
<b>4.5</b>	<b>Calculation steps .....</b>	<b>18</b>
<b>4.6</b>	<b>Multiple boilers or generation sub-systems .....</b>	<b>18</b>
<b>4.7</b>	<b>Using net or gross calorific values .....</b>	<b>19</b>
<b>4.8</b>	<b>Boundaries between distribution and generation sub-system .....</b>	<b>20</b>
<b>5</b>	<b>Generation sub-system calculation .....</b>	<b>22</b>
<b>5.1</b>	<b>Available methodologies .....</b>	<b>22</b>
<b>5.2</b>	<b>Seasonal boiler performance method based on system typology (typology method) .....</b>	<b>22</b>
<b>5.2.1</b>	<b>Principle of the method .....</b>	<b>22</b>
<b>5.2.2</b>	<b>Calculation procedure .....</b>	<b>23</b>
<b>5.3</b>	<b>Case specific boiler efficiency method .....</b>	<b>24</b>
<b>5.3.1</b>	<b>Principle of the method .....</b>	<b>24</b>
<b>5.3.2</b>	<b>Input data to the method .....</b>	<b>24</b>
<b>5.3.3</b>	<b>Load of each boiler .....</b>	<b>25</b>
<b>5.3.4</b>	<b>Generators with double service (space heating and domestic hot water production) .....</b>	<b>27</b>
<b>5.3.5</b>	<b>Generator thermal losses .....</b>	<b>28</b>
<b>5.3.6</b>	<b>Total auxiliary energy .....</b>	<b>30</b>
<b>5.3.7</b>	<b>Recoverable generation system thermal losses .....</b>	<b>31</b>
<b>5.3.8</b>	<b>Fuel input .....</b>	<b>32</b>
<b>5.3.9</b>	<b>Operating temperature of the generator .....</b>	<b>32</b>
<b>5.4</b>	<b>Boiler cycling method .....</b>	<b>33</b>
<b>5.4.1</b>	<b>Principle of the method .....</b>	<b>33</b>
<b>5.4.2</b>	<b>Load factor .....</b>	<b>36</b>
<b>5.4.3</b>	<b>Specific thermal losses .....</b>	<b>36</b>
<b>5.4.4</b>	<b>Total thermal losses .....</b>	<b>39</b>
<b>5.4.5</b>	<b>Auxiliary energy .....</b>	<b>40</b>
<b>5.4.6</b>	<b>Calculation procedure for single stage generators .....</b>	<b>41</b>
<b>5.4.7</b>	<b>Multistage and modulating generators .....</b>	<b>41</b>
<b>5.4.8</b>	<b>Condensing boilers .....</b>	<b>44</b>
<b>5.4.9</b>	<b>Systems with multiple generators .....</b>	<b>48</b>

<b>Annex A (informative) Sample seasonal boiler performance method based on system typology (typology method)</b>	<b>50</b>
A.1 Scope	50
A.2 Limitations in use of this method	50
A.3 Boiler typologies definition	50
A.4 Procedure	51
A.5 Declaring values of seasonal efficiency	55
<b>Annex B (informative) Additional formulas and default values for parametering the case specific boiler efficiency method</b>	<b>56</b>
B.1 Information on the method	56
B.1.1 Basic assumptions and intended use	56
B.1.2 Known approximations	56
B.2 Polynomial interpolation formulas	56
B.3 Generator efficiencies and stand-by losses	57
B.3.1 Default values for generator efficiency at full load and intermediate load as a function of the generator power output	57
B.3.2 Stand-by heat losses	59
B.3.3 Correction factor taking into account variation of efficiency depending on generator average water temperature	60
B.4 Auxiliary energy	61
B.5 Recoverable generation thermal losses	62
B.5.1 Auxiliary energy	62
B.5.2 Generator envelope	62
B.5.3 Default data according to boiler location	63
<b>Annex C (informative) Default values for parametering the boiler cycling method</b>	<b>64</b>
C.1 Information on the method	64
C.1.1 Basic assumptions and intended use	64
C.1.2 Known approximations	64
C.2 Default specific losses	64
C.2.1 Default data for calculation of thermal losses through the chimney with burner on	64
C.2.2 Default values for calculation of thermal losses through the generator envelope	65
C.2.3 Default values for calculation of thermal losses through the chimney with the burner off	66
C.3 Default values for calculation of auxiliary energy	67
C.4 Additional default data for multistage and modulating burners	68
C.5 Additional default data for condensing boilers	69
<b>Annex D (informative) General part default values and information</b>	<b>71</b>
D.1 Control factor	71
D.2 Intermediate load	71
<b>Annex E (informative) Calculation example for seasonal boiler performance method based on system typology</b>	<b>72</b>
E.1 Introduction	72
E.2 Input data	72
E.3 Calculation procedure	73
E.4 Output data (connection to other parts of EN 15316)	74
<b>Annex F (informative) Calculation examples for case specific boiler efficiency method</b>	<b>75</b>
F.1 Condensing boiler example, data declared by the manufacturer	75
F.1.1 Input data	75
F.1.2 Calculation procedure	76
F.1.3 Output data (connection to other parts of EN 15316)	77
F.1.4 Conversion of net values to gross values	77

<b>F.2</b>	<b>Standard boiler example, default data .....</b>	<b>78</b>
<b>F.2.1</b>	<b>Input data .....</b>	<b>78</b>
<b>F.2.2</b>	<b>Calculation procedure .....</b>	<b>79</b>
<b>F.2.3</b>	<b>Output data (connection to other parts of EN 15316) .....</b>	<b>81</b>
<b>Annex G (informative) Calculation examples for boiler cycling method .....</b>		<b>82</b>
<b>G.1</b>	<b>Modulating condensing boiler .....</b>	<b>82</b>
<b>G.1.1</b>	<b>Input data .....</b>	<b>82</b>
<b>G.1.2</b>	<b>Calculation procedure .....</b>	<b>84</b>
<b>G.1.3</b>	<b>Output data (connection to other parts of EN 15316) .....</b>	<b>88</b>
<b>G.2</b>	<b>Standard, on-off atmospheric boiler .....</b>	<b>88</b>
<b>G.2.1</b>	<b>Input data .....</b>	<b>88</b>
<b>G.2.2</b>	<b>Calculation procedure .....</b>	<b>90</b>
<b>G.2.3</b>	<b>Output data (connection to other parts of EN 15316) .....</b>	<b>91</b>
<b>Annex H (informative) Boiler water temperature calculation .....</b>		<b>92</b>
<b>H.1</b>	<b>Boiler flow temperature and return temperature .....</b>	<b>92</b>
<b>H.2</b>	<b>Boiler flow rate is the same as the distribution flow rate (no by-pass) .....</b>	<b>93</b>
<b>H.3</b>	<b>Boiler flow rate is not the same as the distribution flow rate (by-pass connection or recirculation pump) .....</b>	<b>94</b>
<b>H.4</b>	<b>Parallel connection of boilers .....</b>	<b>96</b>
<b>H.5</b>	<b>Boiler average water temperature .....</b>	<b>97</b>
<b>H.6</b>	<b>Example of water temperature calculation .....</b>	<b>98</b>
<b>Bibliography .....</b>		<b>99</b>