

DIN EN 12098-1:2017-08 (E)

Energy Performance of Buildings - Controls for heating systems - Part 1: Control equipment for hot water heating systems - Modules M3-5, 6, 7, 8

| Contents | | Page |
|-------------------------|---|-------------|
| European foreword | | 4 |
| Introduction | | 5 |
| 1 | Scope | 6 |
| 2 | Normative references | 8 |
| 3 | Terms and definitions | 8 |
| 4 | Symbols, subscripts and abbreviations | 15 |
| 4.1 | Symbols | 15 |
| 4.2 | Subscripts | 15 |
| 5 | Functionality | 15 |
| 5.1 | Functional objective | 15 |
| 5.2 | Control equipment functionality | 15 |
| 6 | Requirements | 16 |
| 6.1 | Data protection | 16 |
| 6.2 | Characteristic heating curve | 17 |
| 6.3 | Input signal - Sensors | 18 |
| 6.4 | Controller operation modes | 18 |
| 6.4.1 | General | 18 |
| 6.4.2 | Comfort operation mode | 18 |
| 6.4.3 | Economy operation mode | 18 |
| 6.4.4 | Building protection operation mode | 19 |
| 6.4.5 | Automatic operation mode | 19 |
| 6.5 | Frost protection | 19 |
| 6.6 | Additional functions | 19 |
| 6.6.1 | General | 19 |
| 6.6.2 | Summer/Winter switch function | 19 |
| 6.6.3 | Set back function | 19 |
| 6.6.4 | Optimum start function | 19 |
| 6.6.5 | Optimum stop function | 19 |
| 6.7 | Switching times | 20 |
| 6.8 | Manual Operation Mode (MOM) | 20 |
| 6.9 | Parameter settings | 21 |
| 6.10 | Factory settings/Default values | 21 |
| 6.10.1 | Characteristic heating curve | 21 |
| 6.10.2 | Switching times/Operating condition | 21 |
| 6.11 | Switching relays | 21 |
| 6.12 | Electrical requirements | 21 |
| 6.12.1 | Electrical connections | 21 |
| 6.12.2 | Supply voltage | 21 |
| 6.12.3 | Electrical safety | 21 |
| 6.12.4 | Electro-magnetic compatibility | 21 |
| 6.13 | Degree of protection | 22 |
| 6.14 | Environmentally induced stress due to temperature | 22 |
| 6.15 | Materials | 22 |
| 6.16 | Use of graphical symbols | 22 |

| | | |
|-------|--|----|
| 7 | Test methods | 22 |
| 7.1 | Data protection | 22 |
| 7.2 | Controller operation modes | 22 |
| 7.3 | Controller characteristic heating curve | 22 |
| 7.4 | Frost protection | 27 |
| 7.5 | Switching times | 27 |
| 7.6 | Manual Operation Mode | 27 |
| 7.7 | Optimum start-stop function | 27 |
| 7.7.1 | General | 27 |
| 7.7.2 | Test conditions | 29 |
| 7.7.3 | Test run | 29 |
| 7.7.4 | Test results start optimization | 29 |
| 7.8 | Test results stop optimization | 31 |
| 7.9 | Summer/Winter-switch | 32 |
| 7.10 | Set back | 32 |
| 7.11 | Parameter settings | 32 |
| 7.12 | Factory settings | 32 |
| 7.13 | Switching relays | 32 |
| 7.14 | Electrical test | 32 |
| 7.15 | Degrees of protection | 32 |
| 7.16 | Environmental individual stress due to temperature | 32 |
| 8 | Marking | 33 |
| 9 | Documentation | 33 |
| 9.1 | Technical documents | 33 |
| 9.2 | Technical specifications | 33 |
| 9.2.1 | Controller | 33 |
| 9.2.2 | Output signals | 34 |
| 9.2.3 | Input signals (Sensors) | 34 |
| 9.3 | Instruction installation | 34 |
| 9.4 | User guideline | 34 |
| | Bibliography | 35 |