

# ISO 19472:2006-03 (E)

## Machinery for forestry - Winches - Dimensions, performance and safety

---

<b>Contents</b>		<b>Page</b>
Foreword .....		iv
<b>1</b>	<b>Scope .....</b>	<b>1</b>
<b>2</b>	<b>Normative references .....</b>	<b>1</b>
<b>3</b>	<b>Terms and definitions .....</b>	<b>2</b>
<b>4</b>	<b>Symbols .....</b>	<b>3</b>
<b>5</b>	<b>Performance requirements .....</b>	<b>4</b>
<b>5.1</b>	<b>Drum storage capacity .....</b>	<b>4</b>
<b>5.2</b>	<b>Line pull, F .....</b>	<b>5</b>
<b>5.3</b>	<b>Line speed, v .....</b>	<b>6</b>
<b>6</b>	<b>Safety requirements .....</b>	<b>6</b>
<b>6.1</b>	<b>Mechanical safety .....</b>	<b>6</b>
<b>6.2</b>	<b>Drum .....</b>	<b>6</b>
<b>6.3</b>	<b>Rope breaking load .....</b>	<b>7</b>
<b>6.4</b>	<b>Rope fastening .....</b>	<b>7</b>
<b>6.5</b>	<b>Brake .....</b>	<b>7</b>
<b>6.6</b>	<b>Controls .....</b>	<b>7</b>
<b>6.7</b>	<b>Overload device .....</b>	<b>8</b>
<b>6.8</b>	<b>Stability .....</b>	<b>8</b>
<b>6.9</b>	<b>Moving parts for power transmission of winches .....</b>	<b>8</b>
<b>7</b>	<b>Information for use .....</b>	<b>8</b>
<b>7.1</b>	<b>Instruction handbook .....</b>	<b>8</b>
<b>7.2</b>	<b>Marking .....</b>	<b>9</b>
<b>7.3</b>	<b>Warnings .....</b>	<b>9</b>
<b>Bibliography .....</b>		<b>10</b>