

# ISO 16049-2:2013-05 (E)

## Air cargo equipment - Restraint straps - Part 2: Utilization guidelines and lashing calculations

---

Contents	Page
<b>Foreword .....</b>	<b>iv</b>
<b>Introduction .....</b>	<b>v</b>
<b>1 Scope .....</b>	<b>1</b>
<b>2 Normative references .....</b>	<b>1</b>
<b>3 Terms and definitions .....</b>	<b>2</b>
<b>4 General requirements .....</b>	<b>4</b>
<b>5 Tie-down method .....</b>	<b>7</b>
<b>5.1 Basic method .....</b>	<b>7</b>
<b>5.2 Directions of restraint .....</b>	<b>7</b>
<b>6 Calculation methods .....</b>	<b>8</b>
<b>6.1 Load factors .....</b>	<b>8</b>
<b>6.2 Calculation principles .....</b>	<b>9</b>
<b>6.3 Practical calculation .....</b>	<b>10</b>
<b>7 Specific requirements .....</b>	<b>11</b>
<b>7.1 General .....</b>	<b>11</b>
<b>7.2 Risk of cargo slippage .....</b>	<b>11</b>
<b>7.3 Risk of cargo tilting .....</b>	<b>11</b>
<b>7.4 Long and narrow items .....</b>	<b>12</b>
<b>8 Operator's responsibilities .....</b>	<b>12</b>
<b>Bibliography .....</b>	<b>14</b>