

# ISO 6966-2:2014-08 (E)

## Aircraft ground equipment - Basic requirements - Part 2: Safety requirements

---

| <b>Contents</b>    |  | <b>Page</b> |
|--------------------|--|-------------|
| Foreword .....     |  | iv          |
| Introduction ..... |  | v           |
| <b>1</b>           | <b>Scope .....</b>   | <b>1</b>    |
| <b>2</b>           | <b>Normative references .....</b>  | <b>1</b>    |
| <b>3</b>           | <b>Terms and definitions .....</b>   | <b>3</b>    |
| <b>4</b>           | <b>Requirements .....</b>  | <b>4</b>    |
| <b>4.1</b>         | <b>General .....</b>   | <b>4</b>    |
| <b>4.2</b>         | <b>Personnel accommodation .....</b>   | <b>5</b>    |
| <b>4.3</b>         | <b>Stability and strength .....</b>  | <b>8</b>    |
| <b>4.4</b>         | <b>Components .....</b>  | <b>10</b>   |
| <b>4.5</b>         | <b>Personnel protection .....</b>  | <b>11</b>   |
| <b>4.6</b>         | <b>Aircraft protection .....</b>   | <b>15</b>   |
| <b>4.7</b>         | <b>Systems .....</b>   | <b>16</b>   |
| <b>4.8</b>         | <b>Mobility .....</b>  | <b>18</b>   |
| <b>4.9</b>         | <b>Back-up and emergency systems .....</b>   | <b>20</b>   |
| <b>5</b>           | <b>Markings .....</b>  | <b>21</b>   |
| <b>6</b>           | <b>Manufacturer's instructions .....</b>   | <b>22</b>   |
| <b>7</b>           | <b>Quality assurance .....</b>   | <b>22</b>   |
| <b>8</b>           | <b>Operator's responsibilities .....</b>   | <b>22</b>   |
|                    | <b>Annex A (informative) List of typical aircraft ground support equipment .....</b> | <b>23</b>   |
|                    | <b>Annex B (normative) Falling hazard symbol .....</b>                               | <b>24</b>   |
|                    | <b>Annex C (normative) Inching speed symbol .....</b>                                | <b>25</b>   |
|                    | <b>Bibliography .....</b>  | <b>26</b>   |