

# ISO 10842:2006-11 (E)

## Aircraft - Ground service connections - Locations and types

---

<b>Contents</b>		<b>Page</b>
Foreword .....		iv
Introduction .....		v
<b>1</b>	<b>Scope .....</b>	<b>1</b>
<b>2</b>	<b>Normative references .....</b>	<b>1</b>
<b>3</b>	<b>Terms and definitions .....</b>	<b>2</b>
<b>4</b>	<b>Requirements .....</b>	<b>2</b>
<b>4.1</b>	<b>General .....</b>	<b>2</b>
<b>4.2</b>	<b>Location reference .....</b>	<b>3</b>
<b>4.3</b>	<b>Connections height .....</b>	<b>3</b>
<b>5</b>	<b>Connections locations and types (all aircraft) .....</b>	<b>3</b>
<b>5.1</b>	<b>Electrical power .....</b>	<b>3</b>
<b>5.2</b>	<b>Interphone (headset) .....</b>	<b>3</b>
<b>5.3</b>	<b>Fuelling .....</b>	<b>4</b>
<b>5.4</b>	<b>Lavatory service .....</b>	<b>4</b>
<b>5.5</b>	<b>Potable water .....</b>	<b>4</b>
<b>6</b>	<b>Connections locations and types (aircraft with a single door forward of the wing) .....</b>	<b>4</b>
<b>6.1</b>	<b>Location area .....</b>	<b>4</b>
<b>6.2</b>	<b>Pneumatic power .....</b>	<b>5</b>
<b>6.3</b>	<b>Preconditioned air .....</b>	<b>5</b>
<b>7</b>	<b>Connections locations and types (aircraft with two doors forward of the wing) .....</b>	<b>5</b>
<b>7.1</b>	<b>Location area .....</b>	<b>5</b>
<b>7.2</b>	<b>Pneumatic power .....</b>	<b>5</b>
<b>7.3</b>	<b>Preconditioned air .....</b>	<b>6</b>
<b>8</b>	<b>Prevention of GSE interference .....</b>	<b>6</b>
Bibliography .....		10