

# ISO 13297:2014-12 (E)

## Small craft - Electrical systems - Alternating current installations

---

<b>Contents</b>		<b>Page</b>
Foreword .....		iv
<b>1</b>	<b>Scope .....</b>	<b>1</b>
<b>2</b>	<b>Normative references .....</b>	<b>1</b>
<b>3</b>	<b>Terms and definitions .....</b>	<b>1</b>
<b>4</b>	<b>General requirements .....</b>	<b>4</b>
<b>5</b>	<b>Marking .....</b>	<b>6</b>
<b>6</b>	<b>Ignition sources .....</b>	<b>7</b>
<b>7</b>	<b>Overcurrent protection .....</b>	<b>7</b>
<b>7.1</b>	<b>General .....</b>	<b>7</b>
<b>7.2</b>	<b>Supply circuits .....</b>	<b>8</b>
<b>7.3</b>	<b>Branch circuits .....</b>	<b>8</b>
<b>8</b>	<b>Ground-fault protection/earth-leakage protection .....</b>	<b>8</b>
<b>9</b>	<b>Appliances and equipment .....</b>	<b>9</b>
<b>10</b>	<b>System wiring .....</b>	<b>9</b>
<b>11</b>	<b>Conductor and cable installation .....</b>	<b>10</b>
<b>12</b>	<b>Panel boards (switchboards) .....</b>	<b>11</b>
<b>13</b>	<b>Socket outlets .....</b>	<b>12</b>
<b>14</b>	<b>Power source options .....</b>	<b>12</b>
<b>15</b>	<b>Inverters and inverterchargers .....</b>	<b>13</b>
<b>Annex A (normative) Conductor requirements .....</b>		<b>15</b>
<b>Annex B (normative) Instructions to be included with owner's manual .....</b>		<b>17</b>
<b>Annex C (informative) Recommended system tests .....</b>		<b>18</b>
<b>Annex D (informative) Typical a.c. system diagrams .....</b>		<b>19</b>
<b>Bibliography .....</b>		<b>27</b>