

# ISO 22472:2016-09 (E)

## Ships and marine technology - Guidelines for the operation and installation of voyage data recorder (VDR)

---

| <b>Contents</b> |  | <b>Page</b> |
|-----------------|--|-------------|
| Foreword .....  |  | v           |
| <b>1</b>        | <b>Scope .....</b>   | <b>1</b>    |
| <b>2</b>        | <b>Normative references .....</b>  | <b>1</b>    |
| <b>3</b>        | <b>Terms, definitions and abbreviated terms .....</b>                          | <b>2</b>    |
| <b>3.1</b>      | <b>Terms and definitions .....</b>   | <b>2</b>    |
| <b>3.2</b>      | <b>Abbreviated terms .....</b>   | <b>4</b>    |
| <b>4</b>        | <b>VDR interface .....</b>   | <b>4</b>    |
| <b>4.1</b>      | <b>General .....</b>   | <b>4</b>    |
| <b>4.2</b>      | <b>Input signals required for VDR interfaces .....</b>                         | <b>4</b>    |
| <b>4.2.1</b>    | <b>Signals defined in applicable parts of IEC 61162 series .....</b>           | <b>4</b>    |
| <b>4.2.2</b>    | <b>Signals other than IEC 61162 format .....</b>                               | <b>5</b>    |
| <b>4.2.3</b>    | <b>Bridge audible sound captured by microphones .....</b>                      | <b>6</b>    |
| <b>4.2.4</b>    | <b>VHF radio connection .....</b>  | <b>6</b>    |
| <b>4.2.5</b>    | <b>Radar display connection .....</b>  | <b>6</b>    |
| <b>4.2.6</b>    | <b>ECDIS display connection .....</b>  | <b>6</b>    |
| <b>4.3</b>      | <b>Main alarms .....</b>   | <b>7</b>    |
| <b>4.4</b>      | <b>AIS .....</b>   | <b>7</b>    |
| <b>4.5</b>      | <b>Bridge alert management interface .....</b>                                 | <b>7</b>    |
| <b>5</b>        | <b>Details of interfaces between sensors and VDR .....</b>                     | <b>7</b>    |
| <b>5.1</b>      | <b>General .....</b>   | <b>7</b>    |
| <b>5.2</b>      | <b>Date and time (IEC 61996-1:2013, 4.6.1) .....</b>                           | <b>7</b>    |
| <b>5.3</b>      | <b>Ship's position (IEC 61996-1:2013, 4.6.2) .....</b>                         | <b>8</b>    |
| <b>5.4</b>      | <b>Speed (IEC 61996-1:2013, 4.6.3) .....</b>                                   | <b>8</b>    |
| <b>5.5</b>      | <b>Heading (IEC 61996-1:2013, 4.6.4) .....</b>                                 | <b>8</b>    |
| <b>5.6</b>      | <b>Bridge audio (IEC 61996-1:2013, 4.6.5) .....</b>                            | <b>9</b>    |
| <b>5.7</b>      | <b>VHF communication audio (IEC 61996-1:2013, 4.6.6) .....</b>                 | <b>9</b>    |
| <b>5.8</b>      | <b>Radar data-post-display selection (IEC 61996-1:2013, 4.6.7) .....</b>       | <b>9</b>    |
| <b>5.9</b>      | <b>ECDIS (IEC 61996-1:2013, 4.6.8) .....</b>                                   | <b>11</b>   |
| <b>5.10</b>     | <b>Depth (Echo sounder) (IEC 61996-1:2013, 4.6.9) .....</b>                    | <b>12</b>   |
| <b>5.11</b>     | <b>Main alarms on the bridge (IEC 61996-1:2013, 4.6.10) .....</b>              | <b>12</b>   |
| <b>5.12</b>     | <b>Rudder order and response (IEC 61996-1:2013, 4.6.11) .....</b>              | <b>13</b>   |
| <b>5.12.1</b>   | <b>Rudder order and response from HCS or TCS (if installed) .....</b>          | <b>13</b>   |
| <b>5.12.2</b>   | <b>Rudder order and response from steering system .....</b>                    | <b>13</b>   |
| <b>5.13</b>     | <b>Engine and thruster order and response (IEC 61996-1:2013, 4.6.12) .....</b> | <b>14</b>   |
| <b>5.13.1</b>   | <b>Engine order and response .....</b>   | <b>14</b>   |
| <b>5.13.2</b>   | <b>Thruster order and response .....</b>                                       | <b>14</b>   |
| <b>5.14</b>     | <b>Hull openings (doors) status (IEC 61996-1:2013, 4.6.13) .....</b>           | <b>15</b>   |
| <b>5.15</b>     | <b>Watertight and fire door status (IEC 61996-1:2013, 4.6.14) .....</b>        | <b>15</b>   |
| <b>5.15.1</b>   | <b>Watertight and fire door status .....</b>                                   | <b>15</b>   |
| <b>5.16</b>     | <b>Accelerations and hull stresses (IEC 61996-1:2013, 4.6.15) .....</b>        | <b>16</b>   |
| <b>5.17</b>     | <b>Wind speed and direction (IEC 61996-1:2013, 4.6.16) .....</b>               | <b>16</b>   |
| <b>5.18</b>     | <b>AIS data (IEC 61996-1:2013, 4.6.17) .....</b>                               | <b>16</b>   |
| <b>5.19</b>     | <b>Rolling motion (IEC 61996-1:2013, 4.6.18) .....</b>                         | <b>17</b>   |
| <b>5.20</b>     | <b>Configuration (IEC 61996-1:2013, 4.6.19) .....</b>                          | <b>17</b>   |
| <b>5.21</b>     | <b>Electronic logbook (IEC 61996-1:2013, 4.6.20) .....</b>                     | <b>17</b>   |

|              |  |           |
|--------------|--|-----------|
| <b>6</b>     | <b>Installation .....</b>  | <b>18</b> |
| <b>6.1</b>   | <b>Required VDR equipment .....</b>  | <b>18</b> |
| <b>6.2</b>   | <b>Power supply of the VDR and interfaces .....</b>  | <b>18</b> |
| <b>6.2.1</b> | <b>Power supply from the ship's emergency source of electrical power .....</b>                       | <b>18</b> |
| <b>6.2.2</b> | <b>Power supply from the reserve power source .....</b>  | <b>18</b> |
| <b>6.3</b>   | <b>Installation of the protective capsule and float free capsule (IEC 61996-1:2013, 5.1.1) .....</b> | <b>18</b> |
| <b>6.4</b>   | <b>Positions of microphones (IEC 61996-1:2013, 4.6.5) .....</b>                                      | <b>19</b> |
| <b>6.5</b>   | <b>Cable connections .....</b>   | <b>19</b> |
| <b>6.6</b>   | <b>Ship specific documentation .....</b>   | <b>19</b> |
| <b>6.6.1</b> | <b>Planning and approval documentation .....</b>   | <b>19</b> |
| <b>7</b>     | <b>Acceptance test (Commissioning) .....</b>   | <b>20</b> |
| <b>8</b>     | <b>Performance Tests .....</b>   | <b>20</b> |
| <b>8.1</b>   | <b>General .....</b>   | <b>20</b> |
| <b>8.2</b>   | <b>Operational Performance Test (IEC 61996-1:2013, 5.12) .....</b>                                   | <b>20</b> |
| <b>8.3</b>   | <b>Annual Performance Test .....</b>   | <b>20</b> |
| <b>9</b>     | <b>Download and playback equipment for investigation authorities .....</b>                           | <b>21</b> |
| <b>9.1</b>   | <b>General .....</b>   | <b>21</b> |
| <b>9.2</b>   | <b>Information for use by an investigation authority (IEC 61996-1) .....</b>                         | <b>21</b> |
|              | <b>Annex A (informative) Mandatory alarms (IEC 61996-1:2013, Annex B) .....</b>                      | <b>22</b> |
|              | <b>Annex B (informative) LAN image protocol (IEC 61996-1:2013, Annex E) .....</b>                    | <b>25</b> |
|              | <b>Annex C (informative) Network for image transmission (IEC 61996-1:2013, Annex F) .....</b>        | <b>30</b> |
|              | <b>Annex D (informative) ECDIS display source information (IEC 61996-1:2013, Annex G) .....</b>      | <b>33</b> |
|              | <b>Annex E (informative) Manufacturer's documentation (IEC 61996-1:2013, 5.5) .....</b>              | <b>38</b> |
|              | <b>Annex F (informative) Performance test report (IMO Circular MSC.1/Circ.1222 Appendix) .....</b>   | <b>40</b> |
|              | <b>Bibliography .....</b>  | <b>45</b> |