

# ISO 13297:2020 (E)

## Small craft — Electrical systems — Alternating and direct current installations

### Contents

	Foreword
1	Scope
2	Normative references
3	Terms and definitions
4	General requirements, DC and AC systems
5	General requirements, DC systems
6	General requirements, AC systems
7	Marking, AC systems
8	Batteries, DC systems
9	Battery-disconnect switch, DC systems
10	Power source options, AC systems
11	Inverters and inverter/chargers, AC systems
12	Overcurrent protection, DC systems
13	Overcurrent protection, AC systems
13.1	General
13.2	Supply circuits
13.3	Branch circuits
14	Ground-fault protection/earth-leakage protection, AC systems
15	Panel boards (switchboards), DC and AC systems
16	Panel boards (switchboards), AC systems
17	Conductors, DC and AC systems
18	Conductors, DC systems
19	Conductors, AC systems
20	System wiring, DC and AC systems
21	System wiring, DC systems
22	Socket outlets, DC systems
23	Socket outlets, AC systems
24	Appliances and equipment, AC systems
25	Ignition protection, DC and AC systems

- 26            Owner's manual**
- Annex A    (normative) Conductor requirements**
- Annex B    (normative) Instructions to be included with owner's manual**
- Annex C    (informative) Recommended system tests**
- Annex D    (informative) Typical AC system diagrams**
- Annex E    (informative) Overcurrent protection location options**

**Page count: 34**