

# ISO 10240:2004-10 (E)

## Small craft - Owner's manual

---

<b>Contents</b>		<b>Page</b>
Foreword .....		iv
Introduction .....		v
<b>1</b>	<b>Scope .....</b>	<b>1</b>
<b>2</b>	<b>Normative references .....</b>	<b>1</b>
<b>3</b>	<b>Terms and definitions .....</b>	<b>2</b>
<b>4</b>	<b>General requirements .....</b>	<b>2</b>
<b>4.1</b>	<b>Information required .....</b>	<b>2</b>
<b>4.2</b>	<b>Format .....</b>	<b>2</b>
<b>4.3</b>	<b>Units and definitions .....</b>	<b>2</b>
<b>4.4</b>	<b>Illustrations .....</b>	<b>3</b>
<b>5</b>	<b>Content of owner's manual .....</b>	<b>3</b>
<b>5.1</b>	<b>General .....</b>	<b>3</b>
<b>5.2</b>	<b>Introduction to the manual .....</b>	<b>3</b>
<b>5.3</b>	<b>General information and craft data .....</b>	<b>3</b>
<b>5.4</b>	<b>Maximum number of persons .....</b>	<b>4</b>
<b>5.5</b>	<b>Loading .....</b>	<b>5</b>
<b>5.6</b>	<b>Engine information .....</b>	<b>5</b>
<b>5.7</b>	<b>Information connected with the risk of flooding and stability .....</b>	<b>5</b>
<b>5.8</b>	<b>Information connected with the risk of fire or explosion .....</b>	<b>6</b>
<b>5.9</b>	<b>Electrical systems -- Risks of fire, explosion or electric shocks .....</b>	<b>8</b>
<b>5.10</b>	<b>Handling characteristics .....</b>	<b>8</b>
<b>5.11</b>	<b>Proper operation -- Other recommendations and information .....</b>	<b>9</b>
<b>6</b>	<b>Other information .....</b>	<b>10</b>
<b>Annex A (normative) General introduction for the owner's manual .....</b>		<b>11</b>
<b>Annex B (informative) List of International Standards requiring information and safety labels to be inserted in the owner's manual .....</b>		<b>12</b>
<b>Bibliography .....</b>		<b>13</b>