

# ISO/IEC 29341-6-17:2008-11 (E)

## Information technology\_ - UPnP Device Architecture\_ - Part\_6-17: Heating, Ventilation, and Air Conditioning Device Control Protocol\_ - User Operating Mode Service

---

### CONTENTS

- FOREWORD .....3
- ORIGINAL UPNP DOCUMENTS (informative) .....5
- 1. Overview and Scope.....7**
- 2. Service Modeling Definitions .....8**
  - 2.1. ServiceType .....8
  - 2.2. State Variables .....8
    - 2.2.1. ModeTarget.....9
    - 2.2.2. ModeStatus .....9
    - 2.2.3. Name .....9
    - 2.2.4. Relationships Between State Variables .....9
  - 2.3. Eventing and Moderation .....10
    - 2.3.1. Event Model .....10
  - 2.4. Actions.....10
    - 2.4.1. SetModeTarget .....11
    - 2.4.2. GetModeTarget.....11
    - 2.4.3. GetModeStatus .....12
    - 2.4.4. GetName.....12
    - 2.4.5. SetName .....13
    - 2.4.6. Non-Standard Actions Implemented by a UPnP Vendor .....13
    - 2.4.7. Relationships Between Actions.....13
    - 2.4.8. Common Error Codes .....14
  - 2.5. Theory of Operation .....14
- 3. XML Service Description.....15**
- 4. Test .....17**

### LIST OF TABLES

- Table 1 State Variables .....8
- Table 2 AllowedValueList for ModeTarget.....8
- Table 3 AllowedValueList for ModeStatus .....9
- Table 4 Eventing & Moderation .....10
- Table 5 Event Model.....10
- Table 6 Action list .....10
- Table 7 Arguments for SetModeTarget .....11
- Table 8 Arguments for GetModeTarget.....11
- Table 9 Arguments for GetModeStatus .....12
- Table 10 Arguments for GetName .....12
- Table 11 Arguments for SetName .....13
- Table 12: Common Error Codes.....14