

# ISO/IEC 29341-8-14:2008-11 (E)

## Information technology\_ - UPnP Device Architecture\_ - Part\_ 8-14: Internet Gateway Device Control Protocol\_ - Wide Area Network Cable Link Configuration Service

---

### CONTENTS

- FOREWORD ..... 4
- ORIGINAL UPNP DOCUMENTS (informative) ..... 6
- 1. Overview and Scope ..... 8**
- 2. Service Modeling Definitions ..... 9**
  - 2.1. ServiceType ..... 9
  - 2.2. State Variables ..... 9
    - 2.2.1. CableLinkConfigState ..... 10
    - 2.2.2. LinkType ..... 11
    - 2.2.3. DownstreamFrequency ..... 11
    - 2.2.4. DownstreamModulation ..... 11
    - 2.2.5. UpstreamFrequency ..... 11
    - 2.2.6. UpstreamModulation ..... 11
    - 2.2.7. UpstreamChannelID ..... 11
    - 2.2.8. UpstreamPowerLevel ..... 11
    - 2.2.9. BPIEncryptionEnabled ..... 11
    - 2.2.10. ConfigFile ..... 11
    - 2.2.11. TFTPServer ..... 11
    - 2.2.12. Relationships Between State Variables ..... 11
  - 2.3. Eventing and Moderation ..... 12
    - 2.3.1. Event Model ..... 12
  - 2.4. Actions ..... 13
    - 2.4.1. GetCableLinkConfigInfo ..... 13
    - 2.4.2. GetDownstreamFrequency ..... 14
    - 2.4.3. GetDownstreamModulation ..... 14
    - 2.4.4. GetUpstreamFrequency ..... 15
    - 2.4.5. GetUpstreamModulation ..... 15
    - 2.4.6. GetUpstreamChannelID ..... 16
    - 2.4.7. GetUpstreamPowerLevel ..... 16
    - 2.4.8. GetBPIEncryptionEnabled ..... 17
    - 2.4.9. GetConfigFile ..... 17
    - 2.4.10. GetTFTPServer ..... 18
    - 2.4.11. Non-Standard Actions Implemented by a UPnP Vendor ..... 18
    - 2.4.12. Relationships Between Actions ..... 18
    - 2.4.13. Common Error Codes ..... 18
  - 2.5. Theory of Operation ..... 19
    - 2.5.1. Connection Initiation ..... 19
    - 2.5.2. Deployment Scenarios ..... 22
- 3. XML Service Description ..... 23**
- 4. Test ..... 26**

## LIST OF TABLES

Table 1: State Variables .....	9
Table 1.1: AllowedValueList for CableLinkConfigState.....	10
Table 1.2: AllowedValueList for LinkType.....	10
Table 1.3: AllowedValueList for DownstreamModulation.....	10
Table 1.4: AllowedValueList for UpstreamModulation.....	10
Table 2: Event Moderation.....	12
Table 3: Actions.....	13
Table 4: Arguments for GetCableLinkConfigInfo .....	13
Table 5: Arguments for Get GetDownstreamFrequency .....	14
Table 6: Arguments for GetDownstreamModulation.....	14
Table 7: Arguments for GetUpstreamFrequency.....	15
Table 8: Arguments for GetUpstreamModulation .....	15
Table 9: Arguments for GetUpstreamChannelID.....	16
Table 10: Arguments for GetUpstreamPowerLevel .....	16
Table 11: Arguments for GetBPIEncryptionEnabled.....	17
Table 12: Arguments for GetConfigFile.....	17
Table 13: Arguments for GetTFTPServer.....	18
Table 14: Common Error Codes.....	18