

# DIN 1499:2020-08 (E)

## Tension bush for external application

---

<b>Contents</b>		<b>Page</b>
<b>Foreword</b> .....		<b>3</b>
<b>Introduction</b> .....		<b>4</b>
<b>1 Scope</b> .....		<b>5</b>
<b>2 Normative references</b> .....		<b>5</b>
<b>3 Terms and definitions</b> .....		<b>5</b>
<b>4 Types, dimensions, and designation</b> .....		<b>6</b>
<b>5 Fitting instructions</b> .....		<b>10</b>
<b>6 Technical delivery conditions</b> .....		<b>10</b>
<b>7 Designation</b> .....		<b>10</b>
<b>Bibliography</b> .....		<b>11</b>