

# ISO 16358-2:2013-04 (E)

## Air-cooled air conditioners and air-to-air heat pumps - Testing and calculating methods for seasonal performance factors - Part 2: Heating seasonal performance factor

---

<b>Contents</b>		<b>Page</b>
Foreword .....		iv
<b>1</b>	<b>Scope .....</b>	<b>1</b>
<b>2</b>	<b>Normative references .....</b>	<b>1</b>
<b>3</b>	<b>Terms and definitions .....</b>	<b>1</b>
<b>4</b>	<b>Symbols .....</b>	<b>4</b>
<b>5</b>	<b>Tests .....</b>	<b>7</b>
<b>5.1</b>	<b>General .....</b>	<b>7</b>
<b>5.2</b>	<b>Test conditions .....</b>	<b>7</b>
<b>5.3</b>	<b>Test methods .....</b>	<b>9</b>
<b>6</b>	<b>Calculations .....</b>	<b>10</b>
<b>6.1</b>	<b>Heating seasonal performance factor (HSPF) and total heating seasonal performance factor (THSPF) .....</b>	<b>10</b>
<b>6.2</b>	<b>Defined heating load .....</b>	<b>10</b>
<b>6.3</b>	<b>Outdoor temperature bin distribution for heating .....</b>	<b>10</b>
<b>6.4</b>	<b>Heating seasonal characteristics of fixed capacity units .....</b>	<b>11</b>
<b>6.5</b>	<b>Heating seasonal characteristics of two-stage capacity units .....</b>	<b>13</b>
<b>6.6</b>	<b>Heating seasonal characteristics of multi-stage capacity units .....</b>	<b>15</b>
<b>6.7</b>	<b>Heating seasonal characteristics of variable capacity units .....</b>	<b>20</b>
<b>7</b>	<b>Test report .....</b>	<b>24</b>
<b>Annex A (informative) Figures .....</b>		<b>26</b>
<b>Annex B (informative) Calculation of total heating seasonal performance factor (THSPF) .....</b>		<b>30</b>
<b>Annex C (normative) Testing and calculation method for degradation coefficient of cyclic operation .....</b>		<b>32</b>
<b>Annex D (informative) Calculating method for seasonal performance factor when setting a specific heating load .....</b>		<b>35</b>
<b>Annex E (informative) Calculating method for temperature when defined load line crosses each capacity line .....</b>		<b>36</b>