

# ISO 16358-2:2013-04 (E)

## Air-cooled air conditioners and air-to-air heat pumps - Testing and calculating methods for seasonal performance factors - Part 2: Heating seasonal performance factor

---

### Contents

	Page
<b>Foreword .....</b>	<b>iv</b>
<b>1 Scope .....</b>	<b>1</b>
<b>2 Normative references .....</b>	<b>1</b>
<b>3 Terms and definitions .....</b>	<b>1</b>
<b>4 Symbols .....</b>	<b>4</b>
<b>5 Tests .....</b>	<b>7</b>
<b>5.1 General .....</b>	<b>7</b>
<b>5.2 Test conditions .....</b>	<b>7</b>
<b>5.3 Test methods .....</b>	<b>9</b>
<b>6 Calculations .....</b>	<b>10</b>
<b>6.1 Heating seasonal performance factor (HSPF) and total heating seasonal performance factor (THSPF) .....</b>	<b>10</b>
<b>6.2 Defined heating load .....</b>	<b>10</b>
<b>6.3 Outdoor temperature bin distribution for heating .....</b>	<b>10</b>
<b>6.4 Heating seasonal characteristics of fixed capacity units .....</b>	<b>11</b>
<b>6.5 Heating seasonal characteristics of two-stage capacity units .....</b>	<b>13</b>
<b>6.6 Heating seasonal characteristics of multi-stage capacity units .....</b>	<b>15</b>
<b>6.7 Heating seasonal characteristics of variable capacity units .....</b>	<b>20</b>
<b>7 Test report .....</b>	<b>24</b>
<b>Annex A (informative) Figures .....</b>	<b>26</b>
<b>Annex B (informative) Calculation of total heating seasonal performance factor (THSPF) .....</b>	<b>30</b>
<b>Annex C (normative) Testing and calculation method for degradation coefficient of cyclic operation .....</b>	<b>32</b>
<b>Annex D (informative) Calculating method for seasonal performance factor when setting a specific heating load .....</b>	<b>35</b>
<b>Annex E (informative) Calculating method for temperature when defined load line crosses each capacity line .....</b>	<b>36</b>