

DIN EN 14825:2013-12 (E)

Air conditioners, liquid chilling pack ages and heat pumps, with electrically driven compressors, for space heating and cooling - Testing and rating at part load conditions and calculation of seasonal performance

Contents		Page
Foreword		5
Introduction		7
1	Scope	8
2	Normative references	8
3	Terms, definitions, symbols, abbreviated terms and units	8
3.1	Terms and definitions	8
3.2	Symbols, abbreviated terms and units	17
4	Part load conditions in cooling mode	19
4.1	General	19
4.2	Air-to-air units	19
4.3	Water-to-air units and brine-to-air units	20
4.4	Air-to-water units	20
4.5	Water-to-water and brine-to-water units	21
5	Part load conditions in heating mode	22
5.1	General	22
5.2	Air-to-air units	23
5.3	Water-to-air and brine-to-air units	24
5.4	Air-to-water units	25
5.4.1	General	25
5.4.2	Low temperature application	26
5.4.3	Medium temperature application	29
5.4.4	High temperature application	32
5.4.5	Very high temperature application	35
5.5	Water-to-water and brine-to-water units	37
5.5.1	General	37
5.5.2	Low temperature application	38
5.5.3	Medium temperature application	41
5.5.4	High temperature application	44
5.5.5	Very high temperature application	47
6	Calculation methods for reference SEER and reference SEERon	49
6.1	General formula for calculation of reference SEER	49
6.2	Calculation of the reference annual cooling demand (QC)	49
6.3	Calculation of the reference annual electricity consumption (QCE)	50
6.4	Calculation of reference SEERon	50
6.5	Calculation procedure for determination of EERbin(Tj) values at part load conditions B, C, D	51
6.5.1	General	51
6.5.2	For air-to-air & water-to-air units	51
6.5.3	Air-to-water, water-to-water & brine-to-water units	52
7	Calculation methods for reference SCOP, reference SCOPon and reference SCOPnet	52
7.1	General formula for calculation of reference SCOP	52

7.2	Calculation of the reference annual heating demand (QH)	53
7.3	Calculation of the annual electricity consumption (QHE)	53
7.4	Calculation of reference SCOP _{on} and reference SCOP _{net}	53
7.5	Calculation procedure for determination of COP _{bin} (T _j) values at part load conditions A, B, C, D	54
7.5.1	General	54
7.5.2	For air-to-air, brine-to-air and water-to-air units	55
7.5.3	For air-to-water, water-to-water and brine-to-water units	55
8	Test methods for testing capacities, EER _{bin} (T _j) and COP _{bin} (T _j) values during active mode at part load conditions	56
8.1	General	56
8.2	Basic principles	56
8.3	Uncertainties of measurement	57
8.4	Test procedures for units with fixed capacity	58
8.4.1	General	58
8.4.2	Air-to-air and water-to-air units - Determination of the degradation coefficient C _d	58
8.4.3	Air-to-water units and water-to-water units - Determination of the degradation factor C _c	59
8.5	Test procedure for staged and variable capacity units (air-to-air, air-to-water, water-to-air, water/brine-to-water)	60
8.5.1	Air-to-air & water-to-air units	60
8.5.2	Air-to-water and water/brine-to-water units	60
9	Test methods for electric power consumption during thermostat-off mode, standby mode and crankcase heater mode	60
9.1	Measurement of electric power consumption during thermostat-off mode	60
9.2	Measurement of the electric power consumption during standby mode	61
9.3	Measurement of the electric power consumption during crankcase heater mode	61
9.4	Measurement of the electric power consumption during off mode	61
10	Test report	61
11	Technical data sheet	62
Annex A	(normative) Applicable climate bin hours and hours for active mode, thermostat-off, standby, off mode for air conditioners below and equal to 12 kW	63
A.1	Climate bins	63
A.1.1	Bin limit temperature	63
A.1.2	Cooling	63
A.1.3	Heating	63
A.2	Hours for active mode, thermostat-off, standby, off mode	65
A.2.1	Cooling	65
A.2.2	Heating	65
A.3	Hours used for crankcase heater mode	65
A.3.1	Cooling	65
A.3.2	Heating	66
Annex B	(informative) Calculation example for reference SEER _{on} and reference SEER - Application to a reverse cycle air-to-air unit with variable capacity	67
B.1	Calculation of SEER _{on}	67
B.2	Calculation of SEER	68
B.2.1	Calculation of reference annual cooling demand (QC) according to Formula (2)	68
B.2.2	Calculation of reference SEER according to Formula (1)	69
Annex C	(informative) Calculation example for reference SCOP _{on} and reference SCOP _{net} of a fixed capacity air-to-water heat pump used for floor heating	70
Annex D	(informative) Adaption of water temperature for fixed capacity units	74

Annex E (informative) Determination of reference annual cooling/heating demands and determination of hours for active mode, thermostat-off, standby, off mode and crankcase heater mode	77
E.1 General	77
E.2 Determination of reference annual cooling/heating demands and hours for active mode, thermostat-off, standby, off mode	77
E.3 Hours used for crankcase heater mode	79
Annex F (informative) Compensation method for air-to-water and water/brine-to-water units	80
F.1 General	80
F.2 Compensation system for reduced capacity test in cooling mode	80
F.3 Compensation system for reduced capacity test in heating mode	80
Annex G (normative) Template for technical data sheet	82
Annex ZA (informative) Relationship between this European Standard and the requirements of Commission Regulation (EC) No 206/2012	85
Bibliography	86