

# ISO 4126-6:2003-12 (E)

## Safety devices for protection against excessive pressure - Part 6: Application, selection and installation of bursting disc safety devices

---

<b>Contents</b>		<b>Page</b>
Foreword .....		v
Introduction .....		vi
1	Scope .....	1
2	Normative references .....	1
3	Terms and definitions .....	1
4	Symbols and units .....	5
5	Application .....	6
6	Selection .....	7
6.1	Selection of bursting disc safety devices .....	7
6.2	Selection of the performance tolerance .....	8
7	Installation .....	11
7.1	General .....	11
7.2	Location of bursting disc safety devices .....	11
7.3	Installation of bursting disc safety devices .....	12
Annex A (informative) Information to be supplied by the purchaser .....		13
A.1	General .....	13
A.2	Application details .....	13
A.3	Bursting disc safety device operating details .....	13
A.4	Installation details .....	13
A.5	Special details .....	14
A.6	Language .....	14
A.7	Replacement bursting discs .....	14
Annex B (informative) Guidelines for determining the replacement period of a bursting disc .....		15
B.1	Introduction .....	15
B.2	Bursting disc safety devices .....	15
B.3	Replacement period .....	15
B.4	Methods of determining the replacement period .....	16
Annex C (informative) Pressure relief system discharge capacity .....		17
C.1	General .....	17
C.2	Simplified approach .....	17
C.3	Comprehensive approach .....	21
Annex D (informative) Derivation of compressibility factor Z .....		23
Annex E (informative) Flow testing of bursting disc safety devices .....		24
E.1	Scope .....	24

E.2	Test requirements .....	24
E.3	Method of testing .....	27
E.4	Test procedure .....	28
E.5	Determination of flow resistance factor KR .....	29
E.6	Application of flow resistance factor KR .....	32
	Bibliography .....	33