

# ISO 18581:2026-01 (E)

## Compressed natural gas (CNG) and liquefied natural gas (LNG) equipment and accessories - CNG and LNG propulsion systems for small craft - Installation requirements

---

<b>Contents</b>		<b>Page</b>
<b>Foreword</b> .....		<b>v</b>
<b>Introduction</b> .....		<b>vi</b>
<b>1 Scope</b> .....		<b>1</b>
<b>2 Normative references</b> .....		<b>1</b>
<b>3 Terms and definitions</b> .....		<b>2</b>
<b>4 Components</b> .....		<b>7</b>
4.1 General provisions.....		7
4.2 CNG cylinders and LNG containers.....		8
4.2.1 General provisions.....		8
4.2.2 Cylinders.....		8
4.2.3 Fixed container.....		8
4.2.4 Components fitted to the cylinder or fixed container.....		8
4.3 Fuel system components.....		9
4.3.1 Vaporiser.....		9
4.3.2 Other components.....		9
<b>5 Installation requirements</b> .....		<b>10</b>
5.1 General requirements.....		10
5.2 Installer of the CNG or LNG system.....		11
5.3 Additional CNG or LNG systems not connected to the propulsion system.....		11
5.4 Modifications to the structure of the craft.....		11
5.5 Container or cylinder installation.....		12
5.5.1 General.....		12
5.5.2 Fixed containers/cylinders.....		12
5.5.3 Cylinders and containers.....		13
5.5.4 Cylinders/containers lockers.....		13
5.6 Components fitted to the fixed container/cylinder.....		14
5.6.1 General requirement.....		14
5.6.2 Remote-controlled service valve and excess flow valve on the container.....		14
5.6.3 Pressure relief valve (PRV).....		14
5.6.4 Refuelling nozzle.....		14
5.6.5 Level indicator.....		14
5.6.6 Fittings.....		15
5.6.7 Pressure relief device (PRD).....		15
5.7 Gas pipes and hoses.....		15
5.8 Other components.....		16
5.8.1 Gas connections between components of the CNG or LNG system.....		16
5.8.2 Remote-controlled shut-off valve.....		17
5.8.3 Refuelling connector.....		17
5.9 Electrical installation.....		17
5.10 Fuel selection system.....		18
5.11 Gas detection.....		18
5.11.1 General.....		18
5.11.2 Alarm position.....		19
5.11.3 Sensors position.....		19
5.12 Forced ventilation.....		19
5.12.1 General.....		19
5.12.2 Purging of engine space.....		19
5.12.3 Position of venting.....		19

<b>6</b>	<b>Fire-extinguishing equipment</b> .....	<b>20</b>
<b>7</b>	<b>Owner's manual</b> .....	<b>20</b>
<b>8</b>	<b>Commissioning</b> .....	<b>20</b>
	8.1 General.....	20
	8.2 Tightness test.....	20
	8.3 Leakage test.....	20
	8.4 Initial filling of the container/cylinder and the system with LNG/CNG.....	20
	8.5 Fuel system test.....	21
	8.6 Water trial.....	21
	<b>Annex A (normative) Fixing requirements for containers with a capacity up to and including 150 l</b> .....	<b>22</b>
	<b>Annex B (normative) Fixing requirements for containers/cylinders with a capacity over 150 l</b> .....	<b>24</b>
	<b>Annex C (normative) Cylinder/container securing requirements</b> .....	<b>25</b>
	<b>Annex D (normative) Owner's manual</b> .....	<b>28</b>
	<b>Annex E (informative) Example of installation certificate</b> .....	<b>31</b>
	<b>Annex F (informative) Example CNG or LNG identification label</b> .....	<b>32</b>
	<b>Bibliography</b> .....	<b>34</b>