

ISO 14400:2005-06 (E)

Road vehicles - Wheels and rims - Use, general maintenance and safety requirements and out-of-service conditions

Contents		Page
Foreword		v
Introduction		vi
1	Scope	1
2	Normative references	1
3	Terms and definitions	1
4	Use and general maintenance requirements	1
4.1	Wheels and wheel components	1
4.2	Wheel mounting and removal	2
4.3	Studs and nuts	3
5	General safety requirements	3
6	Out-of-service conditions	3
Figure 1 -- Trajectories		2
Figure 2 -- Bolt-hole cracks		7
Figure 3 -- Bolt-hole-to-bolt-hole cracks		8
Figure 4 -- Bolt-hole-to-centre-hole cracks		9
Figure 5 -- Bolt-hole-to-hand-hole cracks		10
Figure 6 -- Hand-hole cracks		11
Figure 7 -- Circumferential cracks on mounting area of hub-piloted wheels		12
Figure 8 -- Cracks at stamp		13
Figure 9 -- Disc-hat cracks		14
Figure 10 -- Elongated bolt holes		15
Figure 11 -- Distorted nut seat		16
Figure 12 -- Burrs around bolt holes		17
Figure 13 -- Worn nut seat		18
Figure 14 -- Excessive wear/corrosion of wheel attachment face		19
Figure 15 -- Circumferential cracks in rim well		20
Figure 16 -- Valve-aperture cracks		21

Figure 17 -- Butt-weld cracks	22
Figure 18 -- Bead-seat cracks	23
Figure 19 -- Rim-gutter cracks	24
Figure 20 -- Disc-to-rim weld cracks	25
Figure 21 -- Side-ring cracks	26
Figure 22 -- Lock-ring cracks	27
Figure 23 -- Bent rim flanges	28
Figure 24 -- Distorted bead seat	29
Figure 25 -- Distorted side ring	30
Figure 26 -- Excessive run-out	31
Figure 27 -- Burrs	32
Figure 28 -- Rim flange wear	33
Figure 29 -- Excessive corrosion on tyre side of rim and gutter area	34