

# ISO 16311-4:2024-03 (E)

## Maintenance and repair of concrete structures - Part 4: Execution of repairs

---

<b>Contents</b>		<b>Page</b>
Foreword		iv
Introduction		v
<b>1</b>	<b>Scope</b>	<b>1</b>
<b>2</b>	<b>Normative references</b>	<b>1</b>
<b>3</b>	<b>Terms and definitions</b>	<b>2</b>
<b>4</b>	<b>Structural stability during execution of repairs</b>	<b>3</b>
<b>5</b>	<b>General requirements</b>	<b>3</b>
<b>6</b>	<b>Methods of repair</b>	<b>4</b>
<b>7</b>	<b>Preparation of substrate</b>	<b>9</b>
7.1	General	9
7.2	Preparation of concrete	11
7.2.1	General	11
7.2.2	Cleaning	11
7.2.3	Roughening	11
7.2.4	Concrete removal	11
7.3	Preparation of reinforcement	12
7.3.1	General	12
7.3.2	Cleaning	12
<b>8</b>	<b>Application of products and systems</b>	<b>12</b>
8.1	General	12
8.2	Structural strengthening to restore member capacity — methods	15
8.2.1	Bonding	15
8.2.2	Hand applied mortar and concrete	15
8.2.3	Sprayed repair mortar or concrete	15
8.2.4	Cast repair mortar or concrete	15
8.2.5	Curing	16
8.2.6	Cracks and joints	16
8.2.7	Surface coatings and other treatments	16
8.2.8	Anchoring	17
8.2.9	Plate bonding and fibre-reinforced polymer (FRP) strengthening	17
8.3	Defects caused by reinforcement corrosion	17
8.3.1	Coating reinforcement	17
8.3.2	Removal	17
8.3.3	Replacement	17
<b>9</b>	<b>Quality control</b>	<b>18</b>
9.1	General	18
9.2	Quality control tests and observations	18
<b>10</b>	<b>Maintenance following completion of remedial action</b>	<b>18</b>
<b>11</b>	<b>Health, safety and the environment</b>	<b>19</b>
<b>Annex A</b> (informative)	<b>Commentary on the execution of repairs</b>	<b>29</b>