

# ISO 11783-1:2007-06 (E)

## Tractors and machinery for agriculture and forestry - Serial control and communications data network - Part 1: General standard for mobile data communication

---

<b>Contents</b>		<b>Page</b>
Foreword .....		iv
Introduction .....		v
<b>1</b>	<b>Scope .....</b>	<b>1</b>
<b>2</b>	<b>Normative references .....</b>	<b>1</b>
<b>3</b>	<b>Terms and definitions .....</b>	<b>1</b>
<b>4</b>	<b>Abbreviated terms .....</b>	<b>9</b>
<b>6.1</b>	<b>General .....</b>	<b>11</b>
<b>6.2</b>	<b>Physical layer .....</b>	<b>11</b>
<b>6.3</b>	<b>Data link layer .....</b>	<b>11</b>
<b>6.4</b>	<b>Network layer .....</b>	<b>13</b>
<b>6.5</b>	<b>Network management .....</b>	<b>13</b>
<b>6.6</b>	<b>Network segments .....</b>	<b>13</b>
<b>6.7</b>	<b>Virtual terminal .....</b>	<b>15</b>
<b>6.8</b>	<b>Tractor ECU .....</b>	<b>15</b>
<b>6.9</b>	<b>Task controllers .....</b>	<b>15</b>
<b>6.10</b>	<b>Farm management computer interface .....</b>	<b>15</b>
<b>6.11</b>	<b>Diagnostics .....</b>	<b>16</b>
<b>6.12</b>	<b>File server .....</b>	<b>16</b>
<b>6.13</b>	<b>Process data .....</b>	<b>16</b>
<b>6.14</b>	<b>Working sets .....</b>	<b>16</b>
<b>6.15</b>	<b>Safe mode operation .....</b>	<b>18</b>
<b>6.16</b>	<b>Addition of parameters and messages .....</b>	<b>18</b>
	<b>Annex A (normative) Parameter group assignments .....</b>	<b>19</b>
	<b>Bibliography .....</b>	<b>94</b>