
 



 


# DIN EN 13015 :2008-12 (E)

Maintenance for lifts and escalators\_ - Rules for maintenance instructions (includes Amendment A1:2008)

---

Contents	Page
Foreword.....	3
0 Introduction .....	3
1 Scope .....	3
2 Normative references .....	3
3 Definitions .....	4
4 Elaboration of maintenance instructions .....	5
4.1 General.....	5
4.2 Elements to be taken into account for the maintenance instructions .....	6
4.3 Information to be included in the maintenance instructions .....	6
4.3.1 General .....	6
4.3.2 Information to the owner of the installation.....	6
4.3.3 Information for the maintenance organisation .....	9
5 Risk assessment.....	10
5.1 General.....	10
5.2 Information for the maintenance organisation .....	11
6 Information to the owner for lift rescue operations .....	11
7 Markings, signs, pictograms and written warnings .....	12
8 Format of the maintenance instruction handbook.....	12
Annex A (informative) Typical examples of checks to be taken into account in maintenance instructions .....	13
Annex B (informative) Examples of elements to be taken into account in risk assessment for maintenance operations .....	17
Annex ZA (informative)  Relationship between this European Standard and the Essential Requirements of EC Directive 98/37/EC  .....	19
Annex ZB (informative)  Relationship between this European Standard and the Essential Requirements of EC Directive 2006/42/EC  .....	20
Annex ZC (informative)  Relationship between this European Standard and the Essential Requirements of EC Directive 95/16/EC  .....	21