

# DIN EN 12525:2011-02 (E)

## Agricultural machinery - Front loaders - Safety (includes Amendment A2:2010)

---

<b>Contents</b>		<b>Page</b>
Foreword .....		4
Introduction .....		5
<b>1</b>	<b>Scope .....</b>	<b>5</b>
<b>2</b>	<b>Normative references .....</b>	<b>5</b>
<b>3</b>	<b>Definitions .....</b>	<b>6</b>
<b>4</b>	<b>Safety requirements and/or measures .....</b>	<b>7</b>
<b>4.1</b>	<b>Mounting of the front loader on a tractor .....</b>	<b>7</b>
<b>4.1.1</b>	<b>Intended use .....</b>	<b>7</b>
<b>4.1.2</b>	<b>Stability of the combined tractor/front loader .....</b>	<b>7</b>
<b>4.1.3</b>	<b>Frame for mounting the front loader on a tractor .....</b>	<b>8</b>
<b>4.2</b>	<b>Dismounting and storing of the lifting arms .....</b>	<b>8</b>
<b>4.2.1</b>	<b>Supporting devices .....</b>	<b>8</b>
<b>4.2.2</b>	<b>Stability .....</b>	<b>8</b>
<b>4.3</b>	<b>Mounting of attachments on the lifting arms .....</b>	<b>8</b>
<b>4.3.1</b>	<b>Intended use .....</b>	<b>8</b>
<b>4.3.2</b>	<b>Device for mounting attachments .....</b>	<b>8</b>
<b>4.3.3</b>	<b>Device for locking attachments .....</b>	<b>8</b>
<b>4.4</b>	<b>Hydraulic circuit .....</b>	<b>9</b>
<b>4.4.1</b>	<b>Hydraulic power and pressures .....</b>	<b>9</b>
<b>4.4.2</b>	<b>Pressure hoses near operator's seat .....</b>	<b>9</b>
<b>4.4.3</b>	<b>Connections .....</b>	<b>9</b>
<b>4.4.4</b>	<b>"Protection against unintended lowering" .....</b>	<b>9</b>
<b>4.5</b>	<b>Manual controls .....</b>	<b>10</b>
<b>4.5.1</b>	<b>Design and arrangement .....</b>	<b>10</b>
<b>4.6</b>	<b>Service and maintenance operations .....</b>	<b>11</b>
<b>5</b>	<b>Verification of safety requirements and/or measures .....</b>	<b>12</b>
<b>6</b>	<b>Information for the assembler .....</b>	<b>12</b>
<b>7</b>	<b>Information for use .....</b>	<b>12</b>
<b>7.1</b>	<b>Instruction handbook .....</b>	<b>12</b>
<b>7.1.1</b>	<b>General .....</b>	<b>12</b>
<b>7.1.2</b>	<b>Manual controls .....</b>	<b>12</b>
<b>7.1.3</b>	<b>Hydraulic circuit .....</b>	<b>13</b>
<b>7.1.4</b>	<b>"Mounting of attachments" .....</b>	<b>13</b>
<b>7.1.5</b>	<b>Use of the front loader .....</b>	<b>13</b>
<b>7.1.6</b>	<b>Dismounting and storing of the lifting arms .....</b>	<b>14</b>
<b>7.2</b>	<b>Marking .....</b>	<b>14</b>
<b>Annex A (normative)</b>	<b>List of hazards .....</b>	<b>16</b>
<b>Annex B (informative)</b>	<b>Stability of the tractor/front loader combination .....</b>	<b>21</b>
<b>B.1</b>	<b>Effects on the stability .....</b>	<b>21</b>
<b>B.2</b>	<b>Means to ensure stability .....</b>	<b>21</b>
<b>B.2.1</b>	<b>Fitting of a counterweight .....</b>	<b>21</b>

<b>B.2.2</b>	<b>Use without counterweight .....</b>	<b>22</b>
	<b>Annex C (informative) Locking device .....</b>	<b>23</b>
	<b>Annex D (informative) Float position .....</b>	<b>24</b>
	<b>Annex E (normative) !Test method and acceptance criteria for means to avoid unintended lowering .....</b>	<b>25</b>
<b>E.1</b>	<b>Terms and definitions .....</b>	<b>25</b>
<b>E.2</b>	<b>Test procedure .....</b>	<b>25</b>
<b>E.3</b>	<b>Acceptance criteria .....</b>	<b>25</b>
	<b>Annex ZA (informative) #Relationship between this European Standard and the Essential Requirements of EU Directive 98/37/EC\$ .....</b>	<b>26</b>
	<b>Annex ZB (informative) #Relationship between this European Standard and the Essential Requirements of EU Directive 2006/42/EC\$ .....</b>	<b>27</b>
	<b>Bibliography .....</b>	<b>28</b>