

DIN EN 14985:2012-05 (E)

Cranes - Slewing jib cranes

Contents		Page
Foreword		4
Introduction		5
1 Scope		6
2 Normative references		6
3 Terms and definitions		8
4 List of hazards		8
5 Safety requirements and/or protective measures		12
5.1 General		12
5.2 Requirements for strength and stability		12
5.2.1 Selection of classification parameters		12
5.2.2 Selection of loads and load combinations		12
5.2.3 Determination of factor 2		12
5.2.4 Stall load condition		13
5.2.5 Loads caused by acceleration		14
5.2.6 Jib side loading		14
5.2.7 Test loads		14
5.2.8 Conditions of use of permissible stress method and limit state method		14
5.2.9 Stability of rail mounted cranes		15
5.3 Electrotechnical equipment		16
5.3.1 General		16
5.3.2 Physical environment and operating conditions		16
5.3.3 Electrical supply		16
5.3.4 External protective earthing and equipotential bonding		16
5.3.5 Supply disconnecting and switching off		16
5.3.6 Protection against electric shock		17
5.3.7 Conductors and cables		17
5.3.8 Control circuits and control functions		17
5.3.9 Operator interface and mounted control devices		18
5.3.10 Control gear - Location, mounting and enclosures		19
5.3.11 Electrical requirements for the installation of load handling devices		19
5.3.12 Electric motors		19
5.4 Non-electrotechnical equipment		19
5.4.1 General		19
5.4.2 Braking systems		20
5.4.3 Hoisting mechanism		21
5.4.4 Luffing system		21
5.4.5 Slew mechanism		22
5.4.6 Travel mechanism		23
5.4.7 Gear drives		23
5.5 Limiting and indicating devices		24
5.5.1 Rated capacity limiters		24
5.5.2 Indicators		25
5.5.3 Motion limiters		25
5.5.4 Performance limiters		25
5.6 Protection against special hazards		26
5.6.1 Hot surfaces		26

5.6.2	Radio equipment	26
5.6.3	Laser beams	26
5.6.4	Fire hazard	26
5.6.5	Exhaust gases	26
5.6.6	Fuelling	26
5.7	Man-machine interface	26
5.7.1	Controls and control stations	26
5.7.2	Guarding and access	27
5.7.3	Lighting	27
5.7.4	Reduction of noise by design	28
5.8	Equipment for information and warning	29
5.8.1	General	29
5.8.2	Location of visual display units	29
5.8.3	Safety colour	29
5.8.4	Warning lights	29
6	Verification of the safety requirements and/or protective measures	29
6.1	General	29
6.2	Fitness for purpose testing	32
6.2.1	General	32
6.2.2	Tests	32
7	Information for use	34
7.1	Instructions for installation and safe use	34
7.2	Driver's manual	34
7.3	User's manual	35
7.4	Instructions for regular checks, inspections and tests	36
7.5	Instructions for maintenance	36
7.6	Markings	37
8	Information to be obtained from the purchaser	37
Annex A (informative) Guidance for classification according to EN 13001-1		38
A.1	Total number of working cycles	38
A.2	Load spectrum factor kQ	39
A.3	Classification of the hoist mechanism	40
A.4	Classification of the luffing mechanism	41
A.5	Classification of the slewing mechanism	43
Annex B (normative) Load combinations		46
Annex C (informative) Calculation of stall load factor for indirect acting lifting force limiter		47
Annex D (normative) Noise test code for slewing jib cranes		49
D.1	General	49
D.2	Description of machinery family	49
D.3	Determination of a conventional emission sound pressure level by calculation	50
D.3.1	Principle of the method	50
D.3.2	Calculation	50
D.4	Emission sound pressure level determination at control stations and other specified positions by measurement	52
D.4.1	Measurement method and points	52
D.4.2	Case of very large cranes	52
D.4.3	Installation and mounting conditions	52
D.4.4	Operating conditions	52
D.5	Uncertainties	53
D.6	Information to be recorded	53
D.7	Information to be reported	54
D.8	Declaration and verification of noise emission values	54

Annex ZA (informative) Relationship between this European Standard and the Essential Requirements of EU Directive 2006/42/EC 55

Bibliography 56