

# DIN EN 13739-1:2012-05 (E)

## Agricultural machinery - Solid fertilizer broadcasters and full width distributors - Environmental protection - Part 1: Requirements

---

<b>Contents</b>		<b>Page</b>
Foreword .....		3
Introduction .....		4
<b>1</b>	<b>Scope .....</b>	<b>5</b>
<b>2</b>	<b>Normative references .....</b>	<b>5</b>
<b>3</b>	<b>Terms and definitions .....</b>	<b>5</b>
<b>4</b>	<b>Requirements .....</b>	<b>7</b>
4.1	General .....	7
4.2	Hopper filling opening .....	7
4.3	Cleaning and emptying of residuals .....	7
4.4	Contact with obstacles .....	7
4.5	Estimation of hopper volume .....	8
4.6	Adjustment of flow rate .....	8
4.7	Flow rate regulation system .....	9
4.8	Adjustment of working width .....	9
4.9	Feeding device .....	9
4.10	Spillage .....	9
4.11	Evenness of transversal distribution .....	9
4.11.1	Field spreading .....	9
4.11.2	Border spreading .....	9
4.11.3	Top-dressing .....	9
4.12	Setting of flow rate .....	10
4.13	Evenness of obtained flow rate .....	10
<b>5</b>	<b>Instruction handbook .....</b>	<b>10</b>
<b>6</b>	<b>Verification .....</b>	<b>12</b>
<b>Annex A (informative)</b>	<b>Checklist for the instruction handbook for full width distributors and solid fertilizer broadcasters .....</b>	<b>13</b>
<b>Bibliography .....</b>		<b>15</b>