

# ISO 3600:1996-09 (E)

## Tractors, machinery for agriculture and forestry, powered lawn and garden equipment - Operator's manuals - Content and presentation

---

<b>Contents</b>		<b>Page</b>
<b>1</b>	<b>Scope .....</b>	<b>1</b>
<b>2</b>	<b>Normative references .....</b>	<b>1</b>
<b>3</b>	<b>Definitions .....</b>	<b>1</b>
<b>4</b>	<b>Content of operator's manual .....</b>	<b>2</b>
<b>4.1</b>	<b>Identification of manual .....</b>	<b>2</b>
<b>4.2</b>	<b>Categories of information .....</b>	<b>2</b>
<b>4.3</b>	<b>Machine Identification .....</b>	<b>2</b>
<b>4.4</b>	<b>Introduction .....</b>	<b>2</b>
<b>4.5</b>	<b>"Intended use" .....</b>	<b>2</b>
<b>4.6</b>	<b>Contents .....</b>	<b>4</b>
<b>4.7</b>	<b>Safety notes and warnings .....</b>	<b>4</b>
<b>4.8</b>	<b>Operating Information .....</b>	<b>5</b>
<b>4.9</b>	<b>Accessories and attachments .....</b>	<b>6</b>
<b>4.10</b>	<b>Maintenance Instructions .....</b>	<b>6</b>
<b>4.11</b>	<b>Storage .....</b>	<b>7</b>
<b>4.12</b>	<b>Handling, reception, transportation, assembly, and Installation .....</b>	<b>7</b>
<b>4.13</b>	<b>Specifications .....</b>	<b>8</b>
<b>4.14</b>	<b>Dismantling and disposal .....</b>	<b>8</b>
<b>4.15</b>	<b>Warranty .....</b>	<b>8</b>
<b>4.16</b>	<b>Alphabetical Index .....</b>	<b>8</b>
<b>4.17</b>	<b>Parts list .....</b>	<b>8</b>
<b>5</b>	<b>Presentation of operator's manuals .....</b>	<b>8</b>
<b>5.1</b>	<b>General considerations .....</b>	<b>8</b>
<b>5.2</b>	<b>Presentation of the text .....</b>	<b>9</b>
<b>5.3</b>	<b>Typographie design .....</b>	<b>9</b>
<b>5.4</b>	<b>Text Conventions .....</b>	<b>10</b>
<b>5.5</b>	<b>Illustrations .....</b>	<b>11</b>
<b>5.6</b>	<b>Instructions (WARNING, CAUTION, IMPORTANT, and NOTE) .....</b>	<b>13</b>
<b>5.7</b>	<b>Numbering of pages, figures and tables .....</b>	<b>14</b>
<b>5.8</b>	<b>References and index .....</b>	<b>14</b>
<b>Annex</b>		
<b>A</b>	<b>Bibliography .....</b>	<b>16</b>